

PRODUCT-DETAILS

1725-774

1725-774 Cover Frame 5gang(s) studio white matt - impuls



Informations générales

Extension du type de produit	1725-774
Code de produit	2CKA001754A4436
EAN	4011395128558
Description courte	1725-774 Cover Frame 5gang(s) studio white matt - impuls
Description longue	For vertical or horizontal installation.

Installation

Instructions et manuels	No document needed
-------------------------	--------------------

Technique

Fiche produit, informations techniques	No document needed
Number of Gangs	5
Design Range	impuls
Type de montage	Flush Mounted
Type of Fastening	Clamp
Sens de montage	Horizontal Vertical
Finition de surface	Matt Lacquered
Matériau	Thermoplastic
Label Space Provided	No

RAL Number	RAL 9016 - Blanc signalisation
Couleur	studio white matt

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E2783
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	365 mm
Produit Hauteur Net	6 mm
Produit Longueur Net	81 mm
Poids net	84 g

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 1 pièce
Emballage Niveau 1 Poids	0.084 kg
Code douanier	85389099
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA200000E2783
--------------------------------	-----------------

Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
2CKA001753A0164	1740 DR-774 Cover plate with legend Venetian blind Turn button Symbol "arrows" studio white matt - impuls	1740 DR-774	1	piece
2CKA001753A0165	1740 DRL-774 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" studio white matt - impuls	1740 DRL-774	1	piece
2CKA001753A0166	1742-774 Cover Plate Blind cap 1 gang with Mounting plate studio white matt - impuls	1742-774	1	piece
2CKA001753A0167	1743-03-774 Cover Plate SAT 3 gang studio white matt - impuls	1743-03-774	1	piece
2CKA001753A0168	1743-774 Cover Plate SAT 2 gang studio white matt - impuls	1743-774	1	piece
2CKA001753A0170	1746/10-774 Cover Plate Telecommunication inserts 50 x 50 mm studio white matt - impuls	1746/10-774	1	piece
2CKA001753A0171	1746-774 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang studio white matt - impuls	1746-774	1	piece

2CKA001753A0172	1749-774 Cover Plate Cable outlet studio white matt - impuls	1749-774	1	piece
2CKA001753A0173	1751-774 Cover Plate Loudspeaker 2 gang studio white matt - impuls	1751-774	1	piece
2CKA001753A0174	1756-774 Cover Plate Busch-Infolicht® studio white matt - impuls	1756-774	1	piece
2CKA001753A0175	1758-774 Cover plate with labelling field For data connection housing 2 gang studio white matt - impuls	1758-774	1	piece
2CKA001753A0176	1766-774 Cover Plate TAE 1 gang studio white matt - impuls	1766-774	1	piece
2CKA001753A0178	1770-774 Cover plate with legend Time switch Turn button 1 ... 15 Min studio white matt - impuls	1770-774	1	piece
2CKA001753A0179	1771-774 Cover plate with legend Time switch Turn button 10 ... 120 Min studio white matt - impuls	1771-774	1	piece
2CKA001753A0180	1781-774 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1781-774	1	piece
2CKA001753A0181	1785-774 Cover Plate Switch/push button Two-part rocker studio white matt - impuls	1785-774	1	piece
2CKA001753A0182	1786-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1786-774	1	piece
2CKA001753A0183	1786-774-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white matt - impuls	1786-774-507	1	piece
2CKA001753A0184	1789 H-774-101 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0186	1789 KI-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789 KI-774	1	piece
2CKA001753A0187	1789 LI-774 Cover plate with legend Switch/push button Single rocker Symbol "light" studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0188	1789 TR-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789 TR-774	1	piece
2CKA001753A0189	1789-774-101 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789-774-101	1	piece
2CKA001753A0190	1792-774 Cover plate with legend Hotel card Hotel card Card studio white matt - impuls	1792-774	1	piece
2CKA001710A3921	1794 TA-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1794 TA-774	1	piece
2CKA001710A3922	1794-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1794-774	1	piece
2CKA001710A4007	1795 HK-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1795 HK-774	1	piece
2CKA001710A4039	1795 HKEA-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795 HKEA-774	1	piece
2CKA001710A3923	1795 TA-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795 TA-774	1	piece
2CKA001710A3924	1795-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795-774	1	piece
2CKA001753A0191	1800-774 Cover plate with labelling field Modular Jack 2 gang studio white matt - impuls	1800-774	1	piece
2CKA001753A0192	1803-02-774 Cover Plate UAE/IAE (ISDN) 2 gang studio white matt - impuls	1803-02-774	1	piece
2CKA001753A0194	1803-774 Cover Plate UAE/IAE (ISDN) 1 gang studio white matt - impuls	1803-774	1	piece
2CKA002011A3890	20 EUC-774 Socket Protective Contact (SCHUKO) studio white matt - impuls	20 EUC-774	1	piece
2CKA002011A3891	20 EUC-774-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) studio white matt - impuls	20 EUC-774-507	1	piece
2CKA002013A5335	20 EUCKS-774 Socket Protective Contact (SCHUKO) Safety Shutter studio white matt - impuls	20 EUCKS-774	1	piece
2CKA002018A1497	20 EUK-774 Socket insert Protective Contact (SCHUKO) with Hinged Lid studio white matt - impuls	20 EUK-774	1	piece

2CKA002011A3893	20 EUN-774 Socket insert Protective Contact (SCHUKO) studio white matt - impuls	20 EUN-774	1	piece
2CKA002113A5336	2300 UCRKS-774-503 Cover Plates (partly incl. Insert) studio white matt - impuls	2300 UCRKS-774-503	1	piece
2CKA002011A3894	2310EUGL/VA-774-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) studio white matt - impuls	2310EUGL/VA-774-11	1	piece
2CKA002099A0258	2399 UCKS-774 Cover Plates (partly incl. Insert) studio white matt - impuls	2399 UCKS-774	1	piece
2CKA001753A0195	2767-774 Cover Plates (partly incl. Insert) TAE 1 gang studio white matt	2767-774	1	piece
2CKA006430A0379	6430-774 Control Element for Venetian blind Single push button studio white matt - impuls	6430-774	1	piece
2CKA006430A0380	6435-774 Cover plate with legend for Time switch studio white matt - impuls	6435-774	1	piece
2CKA006599A2970	6540-774 Cover Plate for Dimmer Turn button studio white matt - impuls	6540-774	1	piece
2CKA006599A2971	6541-774 Cover Plate for Cooling Central cover plate studio white matt - impuls	6541-774	1	piece
2CKA006599A2972	6543-774-101 Control Element for Switch/dimmer Single push button studio white matt - impuls	6543-774-101	1	piece
2CKA006599A2973	6545-774 Control Element for Dimmer Two-part button studio white matt - impuls	6545-774	1	piece
2CKA008200A0130	8253-774 Cover Plate Loudspeaker white - impuls	8253-774	1	piece
2CKA001731A1942	1716-74 Cover Busch-Infolicht® alpine white - impuls	1716-74	1	piece
2CKA001731A1983	1716-775 Cover Busch-Infolicht® black matt - impuls	1716-775	1	piece
2CKA001731A1952	1716-783 Cover Busch-Infolicht® aluminium silver - impuls	1716-783	1	piece
2CKA001731A1944	1716-79 Cover Busch-Infolicht® champagne metallic - impuls	1716-79	1	piece
2CKA001753A0032	1740 DR-72 Cover Plate Venetian blind Turn button Symbol "arrows" and "0" ivory - impuls	1740 DR-72	1	piece
2CKA001753A4864	1740 DR-74 Cover plate with legend Venetian blind Turn button Symbol "arrows" alpine white - impuls	1740 DR-74	1	piece
2CKA001753A0136	1740 DR-775 Cover plate with legend Venetian blind Turn button Symbol "arrows" black matt - impuls	1740 DR-775	1	piece
2CKA001753A0033	1740 DR-783 Cover plate with legend Venetian blind Turn button Symbol "arrows" aluminium silver - impuls	1740 DR-783	1	piece
2CKA001753A5341	1740 DR-79 Cover Plate Venetian blind Turn button Symbol "arrows" and "0" champagne metallic - impuls	1740 DR-79	1	piece
2CKA001753A8311	1740 DRL-74 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" alpine white	1740 DRL-74	1	piece
2CKA001753A0137	1740 DRL-775 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" black matt - impuls	1740 DRL-775	1	piece
2CKA001753A8345	1740 DRL-79 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" champagne metallic - impuls	1740 DRL-79	1	piece
2CKA001753A0034	1742-72 Cover Plate Blind cap 1 gang with Mounting plate ivory - impuls	1742-72	1	piece
2CKA001753A4930	1742-74 Cover Plate Blind cap 1 gang with Mounting plate alpine white - impuls	1742-74	1	piece
2CKA001753A0138	1742-775 Cover Plate Blind cap 1 gang with Mounting plate black matt - impuls	1742-775	1	piece
2CKA001753A0035	1742-783 Cover Plate Blind cap 1 gang with Mounting plate aluminium silver - impuls	1742-783	1	piece
2CKA001753A5416	1742-79 Cover Plate Blind cap 1 gang with Mounting plate champagne metallic - impuls	1742-79	1	piece
2CKA001753A0036	1743-03-72 Cover Plate TV / Radio / SAT 3 gang ivory - impuls	1743-03-72	1	piece
2CKA001753A4773	1743-03-74 Cover Plate SAT 3 gang alpine white - impuls	1743-03-74	1	piece
2CKA001753A0139	1743-03-775 Cover Plate SAT 3 gang black matt - impuls	1743-03-775	1	piece

2CKA001753A0038	1743-03-783 Cover Plate SAT 3 gang aluminium silver - impuls	1743-03-783	1	piece
2CKA001753A5846	1743-03-79 Cover Plate SAT 3 gang champagne metallic - impuls	1743-03-79	1	piece
2CKA001753A0039	1743-72 Cover Plate SAT 2 gang ivory - impuls	1743-72	1	piece
2CKA001753A4963	1743-74 Cover Plate SAT 2 gang alpine white - impuls	1743-74	1	piece
2CKA001753A0140	1743-775 Cover Plate SAT 2 gang black matt - impuls	1743-775	1	piece
2CKA001753A0040	1743-783 Cover Plate SAT 2 gang aluminium silver - impuls	1743-783	1	piece
2CKA001753A5440	1743-79 Cover Plate SAT 2 gang champagne metallic - impuls	1743-79	1	piece
2CKA001753A0041	1746/10-72 Cover Plate Telecommunication inserts 50 x 50 mm ivory - impuls	1746/10-72	1	piece
2CKA001753A9046	1746/10-74 Cover Plate Telecommunication inserts 50 x 50 mm alpine white - impuls	1746/10-74	1	piece
2CKA001753A0141	1746/10-775 Cover Plate Telecommunication inserts 50 x 50 mm black matt - impuls	1746/10-775	1	piece
2CKA001753A0042	1746/10-783 Cover Plate Telecommunication inserts 50 x 50 mm aluminium silver - impuls	1746/10-783	1	piece
2CKA001753A9079	1746/10-79 Cover Plate Telecommunication inserts 50 x 50 mm champagne metallic - impuls	1746/10-79	1	piece
2CKA001753A0043	1746-72 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang ivory - impuls	1746-72	1	piece
2CKA001753A4997	1746-74 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang alpine white - impuls	1746-74	1	piece
2CKA001753A0142	1746-775 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang black matt - impuls	1746-775	1	piece
2CKA001753A0044	1746-783 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang aluminium silver - impuls	1746-783	1	piece
2CKA001753A5473	1746-79 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang champagne metallic - impuls	1746-79	1	piece
2CKA001753A0046	1749-72 Cover Plate Cable outlet ivory - impuls	1749-72	1	piece
2CKA001753A5002	1749-74 Cover Plate Cable outlet alpine white - impuls	1749-74	1	piece
2CKA001753A0143	1749-775 Cover Plate Cable outlet black matt - impuls	1749-775	1	piece
2CKA001753A0047	1749-783 Cover Plate Cable outlet aluminium silver - impuls	1749-783	1	piece
2CKA001753A5481	1749-79 Cover Plate Cable outlet champagne metallic - impuls	1749-79	1	piece
2CKA001753A0048	1751-72 Cover Plate Loudspeaker 2 gang ivory - impuls	1751-72	1	piece
2CKA001753A4971	1751-74 Cover Plate Loudspeaker 2 gang alpine white - impuls	1751-74	1	piece
2CKA001753A0145	1751-775 Cover Plate Loudspeaker 2 gang black matt - impuls	1751-775	1	piece
2CKA001753A0049	1751-783 Cover Plate Loudspeaker 2 gang aluminium silver - impuls	1751-783	1	piece
2CKA001753A5457	1751-79 Cover Plate Loudspeaker 2 gang champagne metallic - impuls	1751-79	1	piece
2CKA001753A0050	1756-72 Cover Plate Busch-Infolicht® ivory - impuls	1756-72	1	piece
2CKA001753A4922	1756-74 Cover Plate Busch-Infolicht® alpine white - impuls	1756-74	1	piece
2CKA001753A0146	1756-775 Cover Plate Busch-Infolicht® black matt - impuls	1756-775	1	piece
2CKA001753A0051	1756-783 Cover Plate Busch-Infolicht® aluminium silver - impuls	1756-783	1	piece
2CKA001753A5408	1756-79 Cover Plate champagne metallic - impuls	1756-79	1	piece
2CKA001753A0053	1758-72 Cover plate with labelling field For data connection housing 2 gang ivory - impuls	1758-72	1	piece
2CKA001753A5010	1758-74 Cover plate with labelling field For data connection housing 2 gang alpine white - impuls	1758-74	1	piece
2CKA001753A0147	1758-775 Cover plate with labelling field For data connection housing 2 gang black matt - impuls	1758-775	1	piece
2CKA001753A0054	1758-783 Cover plate with labelling field For data connection housing 2 gang aluminium silver - impuls	1758-783	1	piece

2CKA001753A5499	1758-79 Cover plate with labelling field For data connection housing 2 gang champagne metallic - impuls	1758-79	1	piece
2CKA001753A0055	1766-72 Cover Plate TAE 1 gang ivory - impuls	1766-72	1	piece
2CKA001753A4989	1766-74 Cover Plate TAE 1 gang alpine white - impuls	1766-74	1	piece
2CKA001753A0148	1766-775 Cover Plate TAE 1 gang black matt - impuls	1766-775	1	piece
2CKA001753A0056	1766-783 Cover Plate TAE 1 gang aluminium silver - impuls	1766-783	1	piece
2CKA001753A5465	1766-79 Cover Plate TAE 1 gang champagne metallic - impuls	1766-79	1	piece
2CKA001753A0057	1770-72 Cover plate with legend Time switch Turn button Various symbols ivory - impuls	1770-72	1	piece
2CKA001753A4906	1770-74 Cover plate with legend Time switch Turn button 1 ... 15 Min alpine white - impuls	1770-74	1	piece
2CKA001753A0149	1770-775 Cover plate with legend Time switch Turn button 1 ... 15 Min black matt - impuls	1770-775	1	piece
2CKA001753A0058	1770-783 Cover plate with legend Time switch Turn button 1 ... 15 Min aluminium silver - impuls	1770-783	1	piece
2CKA001753A5382	1770-79 Cover plate with legend Time switch Turn button 1 ... 15 Min champagne metallic - impuls	1770-79	1	piece
2CKA001753A0059	1771-72 Cover plate with legend Time switch Turn button Various symbols ivory - impuls	1771-72	1	piece
2CKA001753A4914	1771-74 Cover plate with legend Time switch Turn button 10 ... 120 Min alpine white - impuls	1771-74	1	piece
2CKA001753A0150	1771-775 Cover plate with legend Time switch Turn button 10 ... 120 Min black matt - impuls	1771-775	1	piece
2CKA001753A0061	1771-783 Cover plate with legend Time switch Turn button 10 ... 120 Min aluminium silver - impuls	1771-783	1	piece
2CKA001753A5390	1771-79 Cover plate with legend Time switch Turn button 10 ... 120 Min champagne metallic - impuls	1771-79	1	piece
2CKA001753A0062	1781-72 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1781-72	1	piece
2CKA001753A4849	1781-74 Cover plate with labelling field Switch/push button Single push button alpine white - impuls	1781-74	1	piece
2CKA001753A0151	1781-775 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1781-775	1	piece
2CKA001753A0063	1781-783 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1781-783	1	piece
2CKA001753A5325	1781-79 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1781-79	1	piece
2CKA001753A0064	1785-72 Cover Plate Switch/push button Two-part rocker ivory - impuls	1785-72	1	piece
2CKA001753A4856	1785-74 Cover Plate Switch/push button Two-part rocker alpine white - impuls	1785-74	1	piece
2CKA001753A0152	1785-775 Cover Plate Switch/push button Two-part rocker black matt - impuls	1785-775	1	piece
2CKA001753A0065	1785-783 Cover Plate Switch/push button Two-part rocker aluminium silver - impuls	1785-783	1	piece
2CKA001753A5333	1785-79 Cover Plate Switch/push button Two-part rocker champagne metallic - impuls	1785-79	1	piece
2CKA001753A9976	1786-72-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory - impuls	1786-72-500	1	piece
2CKA001753A9977	1786-74-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - impuls	1786-74-500	1	piece
2CKA001753A0007	1786-74-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - impuls	1786-74-507	1	piece
2CKA001753A0153	1786-775 Cover Plate Switch/push button Single rocker black matt - impuls	1786-775	1	piece
2CKA001753A0067	1786-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1786-783	1	piece

2CKA001753A5267	1786-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1786-79	1	piece
2CKA001753A0008	1786-79-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint champagne metallic - impuls	1786-79-507	1	piece
2CKA001753A0068	1789 H-72-101 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	1789 H-74-101 Cover plate with labelling field Switch/push button Single rocker alpine white - impuls	1789 H-74-101	1	piece
2CKA001753A0154	1789 H-775-101 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1789 H-775-101	1	piece
2CKA001753A0069	1789 H-783-101 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1789 H-783-101	1	piece
2CKA001753A6612	1789 H-79-101 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001753A0070	1789 KI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 KI-72	1	piece
2CKA001753A4823	1789 KI-74 Cover Plate Switch/push button Single rocker alpine white - impuls	1789 KI-74	1	piece
2CKA001753A0155	1789 KI-775 Cover Plate Switch/push button Single rocker black matt - impuls	1789 KI-775	1	piece
2CKA001753A0071	1789 KI-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789 KI-783	1	piece
2CKA001753A5309	1789 KI-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789 KI-79	1	piece
2CKA001753A0072	1789 LI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A4815	1789 LI-74 Cover plate with legend Switch/push button Single rocker Symbol "light" alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0156	1789 LI-775 Cover plate with legend Switch/push button Single rocker Symbol "light" black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	1789 LI-783 Cover plate with legend Switch/push button Single rocker Symbol "arrows" aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	1789 LI-79 Cover plate with legend Switch/push button Single rocker Symbol "light" champagne metallic - impuls	1789 LI-79	1	piece
2CKA001753A0074	1789 TR-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 TR-72	1	piece
2CKA001753A4831	1789 TR-74 Cover Plate Switch/push button Single rocker alpine white - impuls	1789 TR-74	1	piece
2CKA001753A0157	1789 TR-775 Cover Plate Switch/push button Single rocker black matt - impuls	1789 TR-775	1	piece
2CKA001753A0075	1789 TR-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789 TR-783	1	piece
2CKA001753A5317	1789 TR-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789 TR-79	1	piece
2CKA001753A0076	1789-72-101 Cover Plate Switch/push button Single rocker ivory - impuls	1789-72-101	1	piece
2CKA001753A6547	1789-74-101 Cover Plate Switch/push button Single rocker alpine white - impuls	1789-74-101	1	piece
2CKA001753A0158	1789-775-101 Cover Plate Switch/push button Single rocker black matt - impuls	1789-775-101	1	piece
2CKA001753A0077	1789-783-101 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789-783-101	1	piece
2CKA001753A6570	1789-79-101 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789-79-101	1	piece
2CKA001753A0079	1792-72 Cover plate with legend Hotel card Hotel card Card ivory - impuls	1792-72	1	piece
2CKA001753A6703	1792-74 Cover plate with legend Hotel card Hotel card Card alpine white - impuls	1792-74	1	piece
2CKA001753A0159	1792-775 Cover plate with legend Hotel card Hotel card Card black matt - impuls	1792-775	1	piece
2CKA001753A0080	1792-783 Cover plate with legend Hotel card Hotel card Card aluminium silver - impuls	1792-783	1	piece

2CKA001753A6737	1792-79 Cover plate with legend Hotel card Hotel card Card champagne metallic - impuls	1792-79	1	piece
2CKA001710A3774	1794 TA-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1794 TA-72	1	piece
2CKA001710A3706	1794 TA-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1794 TA-74	1	piece
2CKA001710A3916	1794 TA-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1794 TA-775	1	piece
2CKA001710A3775	1794 TA-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1794 TA-783	1	piece
2CKA001710A3708	1794 TA-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1794 TA-79	1	piece
2CKA001710A3745	1794-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1794-72	1	piece
2CKA001710A3552	1794-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1794-74	1	piece
2CKA001710A3917	1794-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1794-775	1	piece
2CKA001710A3744	1794-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1794-783	1	piece
2CKA001710A3554	1794-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1794-79	1	piece
2CKA001710A4005	1795 HK-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1795 HK-72	1	piece
2CKA001710A4006	1795 HK-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1795 HK-74	1	piece
2CKA001710A4008	1795 HK-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1795 HK-775	1	piece
2CKA001710A4010	1795 HK-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1795 HK-783	1	piece
2CKA001710A4011	1795 HK-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1795 HK-79	1	piece
2CKA001710A4037	1795 HKEA-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795 HKEA-72	1	piece
2CKA001710A4038	1795 HKEA-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795 HKEA-74	1	piece
2CKA001710A4040	1795 HKEA-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795 HKEA-775	1	piece
2CKA001710A4042	1795 HKEA-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795 HKEA-783	1	piece
2CKA001710A4043	1795 HKEA-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795 HKEA-79	1	piece
2CKA001710A3776	1795 TA-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795 TA-72	1	piece
2CKA001710A3733	1795 TA-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795 TA-74	1	piece
2CKA001710A3918	1795 TA-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795 TA-775	1	piece
2CKA001710A3777	1795 TA-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795 TA-783	1	piece
2CKA001710A3735	1795 TA-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795 TA-79	1	piece
2CKA001710A3746	1795-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795-72	1	piece
2CKA001710A3577	1795-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795-74	1	piece
2CKA001710A3919	1795-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795-775	1	piece

2CKA001710A3747	1795-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795-783	1	piece
2CKA001710A3579	1795-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795-79	1	piece
2CKA001753A0081	1800-72 Cover Plate Modular Jack 2 gang ivory - impuls	1800-72	1	piece
2CKA001753A8667	1800-74 Cover plate with labelling field Modular Jack 2 gang alpine white - impuls	1800-74	1	piece
2CKA001753A0160	1800-775 Cover plate with labelling field Modular Jack 2 gang black matt - impuls	1800-775	1	piece
2CKA001753A0082	1800-783 Cover plate with labelling field Modular Jack 2 gang aluminium silver - impuls	1800-783	1	piece
2CKA001753A8691	1800-79 Cover Plate Modular Jack 2 gang champagne metallic - impuls	1800-79	1	piece
2CKA001753A0083	1803-02-72 Cover Plate UAE/IAE (ISDN) 2 gang ivory - impuls	1803-02-72	1	piece
2CKA001753A9004	1803-02-74 Cover Plate UAE/IAE (ISDN) 2 gang alpine white - impuls	1803-02-74	1	piece
2CKA001753A0161	1803-02-775 Cover Plate UAE/IAE (ISDN) 2 gang black matt - impuls	1803-02-775	1	piece
2CKA001753A0084	1803-02-783 Cover Plate UAE/IAE (ISDN) 2 gang aluminium silver - impuls	1803-02-783	1	piece
2CKA001753A9038	1803-02-79 Cover Plate UAE/IAE (ISDN) 2 gang champagne metallic - impuls	1803-02-79	1	piece
2CKA001753A0085	1803-72 Cover Plate UAE/IAE (ISDN) 1 gang ivory - impuls	1803-72	1	piece
2CKA001753A8964	1803-74 Cover Plate UAE/IAE (ISDN) 1 gang alpine white - impuls	1803-74	1	piece
2CKA001753A0162	1803-775 Cover Plate UAE/IAE (ISDN) 1 gang black matt - impuls	1803-775	1	piece
2CKA001753A0087	1803-783 Cover Plate UAE/IAE (ISDN) 1 gang aluminium silver - impuls	1803-783	1	piece
2CKA001753A8998	1803-79 Cover Plate UAE/IAE (ISDN) 1 gang champagne metallic - impuls	1803-79	1	piece
2CKA002011A6224	20 EUC-72-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) ivory - impuls	20 EUC-72- 500	1	piece
2CKA002011A6220	20 EUC-74-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) alpine white - impuls	20 EUC-74- 500	1	piece
2CKA002011A3790	20 EUC-74-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) alpine white - impuls	20 EUC-74- 507	1	piece
2CKA002011A3886	20 EUC-775 Socket Protective Contact (SCHUKO) black matt - impuls	20 EUC-775	1	piece
2CKA002011A3845	20 EUC-783 Socket Protective Contact (SCHUKO) aluminium silver - impuls	20 EUC-783	1	piece
2CKA002011A6217	20 EUC-79-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) champagne metallic - impuls	20 EUC-79- 500	1	piece
2CKA002011A3791	20 EUC-79-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) champagne metallic - impuls	20 EUC-79- 507	1	piece
2CKA002013A5274	20 EUCKS-72 Socket Protective Contact (SCHUKO) Safety Shutter ivory white - impuls	20 EUCKS-72	1	piece
2CKA002013A4953	20 EUCKS-74 Socket Protective Contact (SCHUKO) Safety Shutter alpine white - impuls	20 EUCKS-74	1	piece
2CKA002013A5334	20 EUCKS-775 Socket Protective Contact (SCHUKO) Safety Shutter black matt - impuls	20 EUCKS-775	1	piece
2CKA002013A5275	20 EUCKS-783 Socket Protective Contact (SCHUKO) Safety Shutter aluminium silver - impuls	20 EUCKS-783	1	piece
2CKA002013A4979	20 EUCKS-79 Socket Protective Contact (SCHUKO) Safety Shutter champagne metallic - impuls	20 EUCKS-79	1	piece
2CKA002018A1488	20 EUK-72 Socket insert Protective Contact (SCHUKO) with Hinged Lid ivory white - impuls	20 EUK-72	1	piece
2CKA002018A0992	20 EUK-74 Socket insert Protective Contact (SCHUKO) with Hinged Lid alpine white - impuls	20 EUK-74	1	piece

2CKA002018A1496	20 EUK-775 Socket insert Protective Contact (SCHUKO) with Hinged Lid black matt - impuls	20 EUK-775	1	piece
2CKA002018A1489	20 EUK-783 Socket insert Protective Contact (SCHUKO) with Hinged Lid aluminium silver - impuls	20 EUK-783	1	piece
2CKA002018A1016	20 EUK-79 Socket insert Protective Contact (SCHUKO) with Hinged Lid champagne metallic - impuls	20 EUK-79	1	piece
2CKA002011A3846	20 EUN-72 Socket insert Protective Contact (SCHUKO) ivory white - impuls	20 EUN-72	1	piece
2CKA002011A2712	20 EUN-74 Socket insert Protective Contact (SCHUKO) alpine white - impuls	20 EUN-74	1	piece
2CKA002011A3888	20 EUN-775 Socket insert Protective Contact (SCHUKO) black matt - impuls	20 EUN-775	1	piece
2CKA002011A3847	20 EUN-783 Socket insert Protective Contact (SCHUKO) aluminium silver - impuls	20 EUN-783	1	piece
2CKA002011A2787	20 EUN-79 Socket insert Protective Contact (SCHUKO) champagne metallic - impuls	20 EUN-79	1	piece
2CKA002017A0843	20 MUC-72-500 Socket insert Earthing Pin ivory white - impuls	20 MUC-72-500	1	piece
2CKA002017A0822	20 MUC-74-500 Socket insert Earthing Pin alpine white - impuls	20 MUC-74-500	1	piece
2CKA002017A0844	20 MUC-783-500 Socket insert Earthing Pin aluminium silver - impuls	20 MUC-783-500	1	piece
2CKA002017A0824	20 MUC-79-500 Socket insert Earthing pin champagne metallic - impuls	20 MUC-79-500	1	piece
2CKA002017A0830	20 MUCC-74-500 Socket insert Earthing Pin alpine white - impuls	20 MUCC-74-500	1	piece
2CKA002017A0831	20 MUCC-79-500 Socket insert Earthing Pin champagne metallic - impuls	20 MUCC-79-500	1	piece
2CKA002017A0845	20 MUCKS-72-500 Socket insert Earthing Pin Safety Shutter Earthing pin ivory white - impuls	20 MUCKS-72-500	1	piece
2CKA002017A0836	20 MUCKS-74-500 Socket insert French norm NF alpine white - impuls	20 MUCKS-74-500	1	piece
2CKA002017A0846	20 MUCKS-783-500 Cover Plates (partly incl. Insert) French norm NF aluminium silver - impuls	20 MUCKS-783-500	1	piece
2CKA002017A0837	20 MUCKS-79-500 Socket insert Earthing Pin Safety Shutter champagne metallic - impuls	20 MUCKS-79-500	1	piece
2CKA002113A0439	2300 UCRKS-74-503 Cover Plates (partly incl. Insert) alpine white - impuls	2300 UCRKS-74-503	1	piece
2CKA002113A0462	2300 UCRKS-79-503 Cover Plates (partly incl. Insert) champagne metallic - impuls	2300 UCRKS-79-503	1	piece
2CKA002011A3848	2310 EUGL/VA-72-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) ivory white - impuls	2310 EUGL/VA-72-11	1	piece
2CKA002011A3841	2310 EUGL/VA-74-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) alpine white - impuls	2310 EUGL/VA-74-11	1	piece
2CKA002011A3843	2310 EUGL/VA-79-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) champagne metallic - impuls	2310 EUGL/VA-79-11	1	piece
2CKA002011A3889	2310 EUGL/VA-775-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) black matt - impuls	2310 EUGL/VA-775-11	1	piece
2CKA002011A3849	2310 EUGL/VA-783-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) aluminium silver - impuls	2310 EUGL/VA-783-11	1	piece
2CKA002099A0239	2399 UCKS-72 Cover Plates (partly incl. Insert) ivory - impuls	2399 UCKS-72	1	piece
2CKA002099A0232	2399 UCKS-74 Cover Plates (partly incl. Insert) alpine white - impuls	2399 UCKS-74	1	piece
2CKA002099A0257	2399 UCKS-775 Cover Plates (partly incl. Insert) black matt - impuls	2399 UCKS-775	1	piece
2CKA002099A0240	2399 UCKS-783 Cover Plates (partly incl. Insert) aluminium silver - impuls	2399 UCKS-783	1	piece
2CKA002099A0234	2399 UCKS-79 Cover Plates (partly incl. Insert) champagne metallic - impuls	2399 UCKS-79	1	piece
2CKA001753A7222	2767-74 Cover Plates (partly incl. Insert) TAE 1 gang alpine white	2767-74	1	piece
2CKA001753A0163	2767-775 Cover Plates (partly incl. Insert) TAE 1 gang black matt - impuls	2767-775	1	piece

2CKA001753A7255	2767-79 Cover Plates (partly incl. Insert) TAE 1 gang champagne metallic - impuls	2767-79	1	piece
2CKA006430A0337	6430-72 Control Element for Venetian blind Single push button ivory - impuls	6430-72	1	piece
2CKA006430A0144	6430-74 Control Element for Venetian blind Single push button alpine white - impuls	6430-74	1	piece
2CKA006430A0381	6430-775 Control Element for Venetian blind Single push button black matt - impuls	6430-775	1	piece
2CKA006430A0338	6430-783 Control Element for Venetian blind Single push button aluminium silver - impuls	6430-783	1	piece
2CKA006430A0177	6430-79 Control Element for Venetian blind Single push button champagne metallic - impuls	6430-79	1	piece
2CKA006430A0341	6435-72 Cover Plate for Time switch ivory - impuls	6435-72	1	piece
2CKA006430A0300	6435-74 Cover plate with legend for Time switch alpine white - impuls	6435-74	1	piece
2CKA006430A0382	6435-775 Cover plate with legend for Time switch black matt - impuls	6435-775	1	piece
2CKA006430A0342	6435-783 Cover plate with legend for Time switch aluminium silver - impuls	6435-783	1	piece
2CKA006430A0302	6435-79 Cover plate with legend for Time switch champagne metallic - impuls	6435-79	1	piece
2CKA006599A2916	6540-72 Cover Plate for Dimmer Turn button ivory - impuls	6540-72	1	piece
2CKA006599A2084	6540-74 Cover Plate for Dimmer Turn button alpine white - impuls	6540-74	1	piece
2CKA006599A2974	6540-775 Cover Plate for Dimmer Turn button black matt - impuls	6540-775	1	piece
2CKA006599A2917	6540-783 Cover Plate for Dimmer Turn button aluminium silver - impuls	6540-783	1	piece
2CKA006599A2159	6540-79 Cover Plate for Dimmer Turn button champagne metallic - impuls	6540-79	1	piece
2CKA006599A2918	6541-72 Cover Plate for Cooling Central cover plate ivory - impuls	6541-72	1	piece
2CKA006599A2076	6541-74 Cover Plate for Cooling Central cover plate alpine white - impuls	6541-74	1	piece
2CKA006599A2975	6541-775 Cover Plate for Cooling Central cover plate black matt - impuls	6541-775	1	piece
2CKA006599A2142	6541-79 Cover Plate for Cooling Central cover plate champagne metallic - impuls	6541-79	1	piece
2CKA006599A2920	6543-72-101 Control Element for Switch/dimmer Single push button ivory - impuls	6543-72-101	1	piece
2CKA006599A2597	6543-74-101 Control Element for Switch/dimmer Single push button alpine white - impuls	6543-74-101	1	piece
2CKA006599A2976	6543-775-101 Control Element for Switch/dimmer Single push button black matt - impuls	6543-775-101	1	piece
2CKA006599A2921	6543-783-101 Control Element for Switch/dimmer Single push button aluminium silver - impuls	6543-783-101	1	piece
2CKA006599A2621	6543-79-101 Control Element for Switch/dimmer Single push button champagne metallic - impuls	6543-79-101	1	piece
2CKA006599A2922	6545-72 Control Element for Dimmer Two-part button ivory - impuls	6545-72	1	piece
2CKA006599A2903	6545-74 Control Element for Dimmer Two-part button alpine white - impuls	6545-74	1	piece
2CKA006599A2977	6545-775 Control Element for Dimmer Two-part button black matt - impuls	6545-775	1	piece
2CKA006599A2905	6545-79 Control Element for Dimmer Two-part button champagne metallic - impuls	6545-79	1	piece
2CKA008200A0089	8253-72 Cover Plate Loudspeaker white - impuls	8253-72	1	piece
2CKA008200A0090	8253-74 Cover Plate Loudspeaker white - impuls	8253-74	1	piece
2CKA008200A0128	8253-775 Cover Plate Loudspeaker black matt - impuls	8253-775	1	piece
2CKA008200A0117	8253-777 Cover Plate Loudspeaker red	8253-777	1	piece
2CKA008200A0092	8253-783 Cover Plate Loudspeaker aluminium - impuls	8253-783	1	piece
2CKA008200A0091	8253-79 Cover Plate Loudspeaker champagne metallic - impuls	8253-79	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Frames

