

PRODUCT-DETAILS

1722-287

1722-287 Afdekraam 2gang(s) rood - Busch-axcent



Algemene informatie

Type	1722-287
Artikelnummer	2CKA001754A4341
EAN	4011395113356
Omschrijving	1722-287 Afdekraam 2gang(s) rood - Busch-axcent
Omschrijving	Afdekraam 2-voudig afdekraam Voor verticale of horizontale montage.

Installation

Instructies en handleidingen	No document needed
------------------------------	--------------------

Technical

Gegevensblad, technische informatie	No document needed
Aantal eenheden	2
Schakelaarprogramma	Busch-axcent 63x63
Montagetype	Inbouw
Soort bevestiging	Klem
Montagerichting	Horizontaal Verticaal

Uitvoering oppervlakte	Onbehandeld Glanzend
Materiaal	Thermoplast
Voorzien van labelruimte	Nee
RAL-nummer	RAL 3020 - Verkeersrood
Kleur	rood

Environmental

Beschermingsgraad	IP20
RoHS-status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
RoHS-informatie	2CKA200000E2690
REACH-verklaring	2CKA309999E9999

Dimensions

Product netto breedte	91 mm
Product netto hoogte	162 mm
Product netto diepte	11 mm
Product netto gewicht	50.5 g

Ordering

Minimale bestelhoeveelheid	1 stuk
Pakketniveau 1 Units	karton 10 stuk
Pakketniveau 1 Brutogewicht	0.55 kg
Nummer douanetarief	85389099
E-Number (Finland)	2166260
E-Number (Sweden)	1817646
Land van herkomst	Germany (DE)

Certificates and Declarations

Conformiteitsverklaring - CE	2CKA200000E2690
---------------------------------	-----------------

Classifications

ETIM 8	EC000007 - Afdekraam schakelmateriaal
ETIM 9	EC000007 - Afdekraam schakelmateriaal
WEEE-categorie	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001731A1916	1720-84 Rocker Switch Pull cord studio white - 63x63	1720-84	1	piece
2CKA001710A3808	1740 DR/03-84 Cover plate with legend Level switch Turn button studio white - 63x63	1740 DR/03-84	1	piece

2CKA001710A3512	1740 DRL-84-503 Cover Plate Level switch Turn button Symbol "3-level switch" studio white - 63x63	1740 DRL-84-503	1	piece
2CKA001710A3172	1740-84 Cover plate with legend Venetian blind Turn button Symbol "arrows" studio white - 63x63	1740-84	1	piece
2CKA001710A3161	1742-84 Cover Plate Blind cap 1 gang with Mounting plate studio white - 63x63	1742-84	1	piece
2CKA001710A3991	1742-84-500 Cover Plates (partly incl. Insert) Blind cap 0 gang studio white - 63x63	1742-84-500	1	piece
2CKA001724A4368	1743/10-04-84 Cover Plate SAT 4 gang studio white - 63x63	1743/10-04-84	1	piece
2CKA001724A4377	1743-04-84 Cover Plate TV / Radio / 2x SAT 4 gang studio white - 63x63	1743-04-84	1	piece
2CKA001724A4332	1743-84-500 Cover Plates (partly incl. Insert) SAT 3 gang studio white - 63x63	1743-84-500	1	piece
2CKA001710A3173	1745-84 Cover Plate telephone connector boxes (VDo) studio white - 63x63	1745-84	1	piece
2CKA001710A3993	1746/10-84-500 Cover Plates (partly incl. Insert) Telecommunication inserts 0 gang studio white - 63x63	1746/10-84-500	1	piece
2CKA001710A3167	1746-84 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang with Hinged Lid studio white - 63x63	1746-84	1	piece
2CKA001710A4096	1747 BSI-84 Intermediate Ring For cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	piece
2CKA001710A3863	1747 SI-84 Cover Plates (partly incl. Insert) studio white - 63x63	1747 SI-84	1	piece
2CKA001710A3861	1747-84 Intermediate Ring studio white - 63x63	1747-84	1	piece
2CKA001710A3656	1748-84 Cover Plate Data connection 2 gang studio white - 63x63	1748-84	1	piece
2CKA001710A3163	1749-84 Cover Plate Cable outlet studio white - 63x63	1749-84	1	piece
2CKA001710A3166	1750-84 Cover Plate BNC/TNC 2 gang studio white - 63x63	1750-84	1	piece
2CKA001723A0240	1751-84 Cover Plate Loudspeaker 2 gang studio white - 63x63	1751-84	1	piece
2CKA001710A3175	1755 SL/PZ-84-101 Cover plate with legend Venetian blind Key Symbol "arrows" or "0 - 1" studio white - 63x63	1755 SL/PZ-84-101	1	piece
2CKA001753A0092	1756-84 Cover Plate studio white - 63x63	1756-84	1	piece
2CKA001724A2761	1758-84 Cover plate with labelling field For data connection housing studio white - 63x63	1758-84	1	piece
2CKA001731A1877	1764 NLI-84 Rocker with labelling field Switch/push button Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001710A3992	1766-84-500 Cover Plates (partly incl. Insert) TAE 0 gang studio white - 63x63	1766-84-500	1	piece
2CKA001753A0258	1770-84-103 Cover Plate Time switch Toggle 1 ... 15 Min studio white - 63x63	1770-84-103	1	piece
2CKA001753A0301	1771-84-103 Cover Plate Time switch Toggle studio white - 63x63	1771-84-103	1	piece
2CKA001751A3099	1785 JA/02-84 Rocker with legend Venetian blind Two-part rocker Symbol "arrows" studio white - 63x63	1785 JA/02-84	1	piece
2CKA001751A3088	1785 JA-84-500 Cover Plates (partly incl. Insert) Venetian blind Two-part rocker Symbol "arrows" studio white - 63x63	1785 JA-84-500	1	piece
2CKA001751A3128	1785 K-84-500 Cover Plates (partly incl. Insert) Switch/push button Two-part rocker None studio white - 63x63	1785 K-84-500	1	piece
2CKA001751A2992	1785/11-84 Rocker with legend Switch/push button Two-part rocker DND, MUR studio white - 63x63	1785/11-84	1	piece

2CKA001751A3076	1785-84-500 Cover Plates (partly incl. Insert) Switch/push button Two-part rocker Without imprint studio white - 63x63	1785-84-500	1	piece
2CKA001751A3098	1786 JA/02-84 Rocker Venetian blind Single rocker studio white - 63x63	1786 JA/02-84	1	piece
2CKA001751A2998	1786/11-84 Rocker Switch/push button Single rocker DND studio white - 63x63	1786/11-84	1	piece
2CKA001751A3074	1786-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1786-84-500	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2751	1789 H-84 Rocker with legend Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2754	1789 KI-84 Rocker with legend Switch/push button Single rocker Symbol "bell" studio white - 63x63	1789 KI-84	1	piece
2CKA001751A3084	1789 LI-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3161	1789 ST-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Various symbols studio white - 63x63	1789 ST-84- 500	1	piece
2CKA001751A2755	1789 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A3091	1789-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001710A4113	1790-592-84 Cover Plate Medical alarm studio white - 63x63	1790-592-84	1	piece
2CKA001710A3698	1794 TA-84 Cover plate with legend for Thermostat Turn button studio white - 63x63	1794 TA-84	1	piece
2CKA001710A3544	1794-84 Cover Plate for Thermostat studio white - 63x63	1794-84	1	piece
2CKA001710A4017	1795 HK-84 Cover Plate for Thermostat Turn button studio white - 63x63	1795 HK-84	1	piece
2CKA001710A4049	1795 HKEA-84 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 HKEA-84	1	piece
2CKA001710A3725	1795 TA-84 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 TA-84	1	piece
2CKA001710A3569	1795-84 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white - 63x63	1795-84	1	piece
2CKA001753A0311	1796-84 Cover Plate Pull cord studio white - 63x63	1796-84	1	piece
2CKA001710A3990	1800-84-500 Cover Plates (partly incl. Insert) Modular Jack 2 gang studio white - 63x63	1800-84-500	1	piece
2CKA001710A1551	1803-02-84-500 Cover Plates (partly incl. Insert) UAE/IAE (ISDN) 2 gang studio white - 63x63	1803-02-84- 500	1	piece
2CKA001710A1550	1803-84-500 Cover Plates (partly incl. Insert) UAE/IAE (ISDN) 1 gang studio white - 63x63	1803-84-500	1	piece
2CKA002013A5407	20 EUAB-84 Busch-Object socket outlet Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	20 EUAB-84	1	piece
2CKA002011A6207	20 EUC-84-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) studio white - 63x63	20 EUC-84- 500	1	piece

2CKA002013A5418	20 EUCBDR-84 Busch-Service-Socket Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	20 EUCBDR-84	1	piece
2CKA002013A5286	20 EUCBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Control light; LED / Green studio white - 63x63	20 EUCBL-84	1	piece
2CKA002013A5294	20 EUCBLI-84 Busch-steplight Socket insert Protective Contact (SCHUKO) Safety Shutter with Night light; LED / White studio white - 63x63	20 EUCBLI-84	1	piece
2CKA002013A5268	20 EUCKS/DV-84 Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	20 EUCKS/DV-84	1	piece
2CKA002013A5372	20 EUCKS-84-500 Socket insert Protective Contact (SCHUKO) Safety Shutter Protective contact (SCHUKO) studio white - 63x63	20 EUCKS-84-500	1	piece
2CKA002013A5441	20 EUCRB-84-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) studio white - 63x63	20 EUCRB-84-500	1	piece
2CKA002018A1509	20 EUK-84-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) with Hinged Lid studio white - 63x63	20 EUK-84-500	1	piece
2CKA002018A1520	20 EUKB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid studio white - 63x63	20 EUKB-84	1	piece
2CKA002018A1529	20 EUKBR-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid studio white - 63x63	20 EUKBR-84	1	piece
2CKA002018A1540	20 EUKNB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNB-84	1	piece
2CKA002018A1551	20 EUKNBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	piece
2CKA002018A1563	20 EUKNBSL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid and lock; Different locking studio white - 63x63	20 EUKNBSL-84	1	piece
2CKA002018A1564	20 EUKNBSL-84-101 Socket insert Protective Contact (SCHUKO) Safety Shutter with Hinged Lid and lock; Simultaneous locking studio white - 63x63	20 EUKNBSL-84-101	1	piece
2CKA002011A6209	20 EUN-84-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) studio white - 63x63	20 EUN-84-500	1	piece
2CKA002017A0786	20 MUC-84-500 Socket insert Earthing pin studio white - 63x63	20 MUC-84-500	1	piece
2CKA002017A0807	20 MUCKS-84-500 Socket insert Earthing Pin Safety Shutter French norm NF studio white - 63x63	20 MUCKS-84-500	1	piece
2CKA001751A3170	2029 UC-84 Bell push-switch DND / MUR insert Single push button Push button DND, MUR with LED studio white - 63x63	2029 UC-84	1	piece
2CKA002495A0086	2095 UC-84 Socket insert Equipotential compensation Socket outlet 2-position studio white - 63x63	2095 UC-84	1	piece
2CKA002190A0215	2190 EUC-84 Cover Plates (partly incl. Insert) Power Socket Outlets - British acc. to BS1363 British Standard studio white - 63x63	2190 EUC-84	1	piece
2CKA002013A5477	23 EUCB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	23 EUCB-84	1	piece
2CKA002013A5451	2300 EUCB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	2300 EUCB-84	1	piece
2CKA002113A0511	2300 UCRKS-84-503 Cover Plates (partly incl. Insert) Safety Shutter studio white - 63x63	2300 UCRKS-84-503	1	piece

2CKA002011A3833	2310 EUGL/VA-84-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) studio white - 63x63	2310 EUGL/VA-84-11	1	piece
2CKA002099A0214	2399 UCKS-84 Socket insert Earthing Pin Safety Shutter Earthing pin studio white - 63x63	2399 UCKS-84	1	piece
2CKA002099A0192	2399 UCKS-84-505 Cover Plates (partly incl. Insert) Safety Shutter studio white - 63x63	2399 UCKS-84-505	1	piece
2CKA001719A0220	2518-WD-84 Intermediate Ring with Hinged Lid For cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - 63x63	2518-WD-84	1	piece
2CKA001751A3180	2520 KI-84-500 Cover Plates (partly incl. Insert) for Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	piece
2CKA001751A3199	2520 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	2520 TR-84	1	piece
2CKA001724A4256	2533-84 Cover Plate Bore hole 1 gang studio white - 63x63	2533-84	1	piece
2CKA001710A3646	2542 DR/01-84 Cover plate with legend Level switch Turn button Symbol "0-1-2-3" studio white - 63x63	2542 DR/01-84	1	piece
2CKA001710A3651	2542 DR/02-84 Cover plate with legend Level switch Turn button Symbol "1-2-3" studio white - 63x63	2542 DR/02-84	1	piece
2CKA001724A4388	2548-022 AR-84 Cover Plate Doctor Blue studio white - 63x63	2548-022 AR-84	1	piece
2CKA001724A4402	2553-84 Cover Plate XLR 1 gang studio white - 63x63	2553-84	1	piece
2CKA001753A0394	2561-02-84 Cover Plate Modular Jack 2 gang studio white - 63x63	2561-02-84	1	piece
2CKA001753A0403	2561-84 Cover Plate Modular Jack 1 gang studio white - 63x63	2561-84	1	piece
2CKA003116A0662	3120 EUCB-84 FI-Schukomat Socket insert Protective Contact (SCHUKO) Safety Shutter studio white - 63x63	3120 EUCB-84	1	piece
2CKA003117A0006	3151 UC-84 RCD - Insert Buschmat RCD 30 mA studio white - 63x63	3151 UC-84	1	piece
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	piece
2CKA006132A0379	6122/10-84-500 BW standard	6122/10-84-500	1	piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	piece
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	piece
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	piece
2CKA006430A0400	6430-84-102-500 Cover Plates (partly incl. Insert) for Venetian blind studio white - 63x63	6430-84-102-500	1	piece
2CKA006430A0306	6435-84 Cover plate with legend for Time switch studio white - 63x63	6435-84	1	piece

2CKA006470A0004	6476-84 Cover Plate for Proximity switch studio white - 63x63	6476-84	1	piece
2CKA006400A0059	6477-84 Cover Plate PowerDock 1 gang studio white - 63x63	6477-84	1	piece
2CKA006400A0047	6480/11-84-500 Cover Plates (partly incl. Insert) studio white	6480/11-84-500	1	piece
2CKA006400A0045	6480-84-500 Cover Plates (partly incl. Insert) studio white - future linear	6480-84-500	1	piece
2CKA006599A3009	6540-84-102-500 Cover Plates (partly incl. Insert) for Dimmer studio white - 63x63	6540-84-102-500	1	piece
2CKA006599A2835	6541-84 Cover Plate for Cooling Central cover plate studio white - 63x63	6541-84	1	piece
2CKA006599A3010	6543-84-101-500 Cover Plates (partly incl. Insert) for Switch/dimmer Single push button studio white - 63x63	6543-84-101-500	1	piece
2CKA006599A2908	6545-84 Control Element for Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	piece
2CKA006710A0011	6716 UJ-84-500 Cover Plates (partly incl. Insert) 4 channel studio white - future linearRadio Control	6716 UJ-84-500	1	piece
2CKA006730A0038	6731-84-500 Cover Plates (partly incl. Insert) 1 channel studio white - 63x63Radio Control	6731-84-500	1	piece
2CKA006730A0039	6732-84-500 Cover Plates (partly incl. Insert) 2 channel studio white - 63x63Radio Control	6732-84-500	1	piece
2CKA006730A0040	6733-84-500 Wall sensor 4 channel studio white - 63x63Radio Control	6733-84-500	1	piece
2CKA006730A0136	6736 FoH-84 Control Element for Switch/dimmer Two-part button studio white - 63x63	6736 FoH-84	1	piece
2CKA006800A2834	6815-84-101-500 Cover Plates (partly incl. Insert) studio white - 63x63	6815-84-101-500	1	piece
2CKA008200A0081	8253-84 Cover Plate Loudspeaker studio white - 63x63	8253-84	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	piece
2CKA006220A0139	SR-1-84 Solo free@home studio white - 63x63	SR-1-84	1	piece
2CKA006220A0154	SR-2-84 Solo free@home studio white - 63x63	SR-2-84	1	piece
2CKA006220A0145	SRB-1-84 Solo free@home studio white - 63x63	SRB-1-84	1	piece
2CKA006220A0160	SRB-2-84 Solo free@home studio white - 63x63	SRB-2-84	1	piece
2CKA006220A0151	SRD-1-84 Solo free@home studio white - 63x63	SRD-1-84	1	piece
2CKA006220A0166	SRD-2-L-84 Solo free@home studio white - 63x63	SRD-2-L-84	1	piece
2CKA006220A0260	SRD-2-R-84 Solo free@home studio white - 63x63	SRD-2-R-84	1	piece
2CKA006220A0142	SRL-1-84 Solo free@home studio white - 63x63	SRL-1-84	1	piece
2CKA006220A0157	SRL-2-L-84 Solo free@home studio white - 63x63	SRL-2-L-84	1	piece
2CKA006220A0169	SRL-2-R-84 Solo free@home studio white - 63x63	SRL-2-R-84	1	piece
2CKA006220A0148	SRS-1-84 Solo free@home studio white - 63x63	SRS-1-84	1	piece
2CKA006220A0163	SRS-2-L-84 Solo free@home studio white - 63x63	SRS-2-L-84	1	piece
2CKA006220A0175	SRS-2-R-84 Solo free@home studio white - 63x63	SRS-2-R-84	1	piece

Categorieën

Laagspanningsproducten en -systemen → Schakelaarprogramma → Afdekramen

