

Level. Layout. Build.[™]

**Broken laser level glass? No need to buy a new laser.
Minimize job site delays with replacement windows.**

- Replace damaged glass on your PLS laser affixed with just five screws
- Please ensure your laser is operating and accurate before swapping glass inserts.
- Minimize job site delays by using this quick in-field windows replacement.



PLS 3R Replacement Window Glass Insert

SKU: PLS-HGI3R

Replacement glass only for the PLS 3R red point laser.



PLS 3G Replacement Window Glass Insert

SKU: PLS-HGI3G

Replacement glass only for the PLS 3G green point laser.



PLS 5R Replacement Window Glass Insert

SKU: PLS-HGI5R

Replacement glass only for the PLS 5R red five-point laser.



PLS 5G Replacement Window Glass Insert

SKU: PLS-HGI5G

Replacement glass only for the PLS 5G green five-point laser.



PLS 6R Replacement Window Glass Insert

SKU: PLS-HGI6R

Replacement glass only for the PLS 6R red combination point and cross line laser.



PLS 6G Replacement Window Glass Insert

SKU: PLS-HGI6G

Replacement glass only for the PLS 6G green combination point and cross line laser.



PLS 180R Replacement Glass Window Insert

SKU: PLS-HGI180R

Replacement glass only for the PLS 180R red cross line laser.



PLS 180G Replacement Glass Window Insert

SKU: PLS-HGI180G

Replacement glass only for the PLS 180G green cross line laser.



Go to www.fluke.co.uk/ to learn more.