


PRODUCT-DETAILS

# 1020/2 USK

## 1020/2 USK Flush Mounted Inserts 2-pole switch

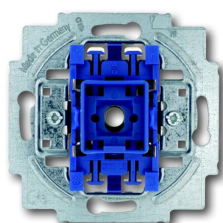

### Informations générales

Extension du type de produit	1020/2 USK
Code de produit	2CKA001020A0031
EAN	4011395964903
Description courte	1020/2 USK Flush Mounted Inserts 2-pole switch
Description longue	With screw-type terminal With neon lamp.

### Technique

Fonction	Function lighting: Control and orientation
Tension nominale (U <sub>r</sub> )	250 V
Auxiliary Voltage AC/DC	250 V AC/DC
Courant nominal (I <sub>n</sub> )	20 A
Maximum Switching Current	Fluorescent Lamps 20 A
Number of Rocker Switches	1
Type de commutation	2-pole switch
Actuator Type	Rocker/button
Type de raccordement	Plug Clamp
Type de lampe	Neon lamp
Type de montage	Flush Mounted
Finition de surface	Untreated Matt

Matériau	Thermoplastic
Label Space Provided	No
Voyant	Illuminated
Lamp Color	Orange

## Environnement

Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E0206
REACH Declaration	2CKA309999E9999

## Dimensions

Produit Largeur Net	71 mm
Produit Hauteur Net	71 mm
Produit Longueur Net	32 mm
Poids net	0.062 kg
Profondeur d'encastrement (t <sub>2</sub> )	32 mm

## Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.624 kg
Code douanier	85365080
Pays d'origine	Germany (DE)

## Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA100000E0106
--------------------------------	-----------------

## Classifications

ETIM 8	EC001590 - Installation switch
ETIM 9	EC001590 - Installation switch
Catégorie DEEE	5. Small Equipment (No External Dimension More Than 50 cm)
DEEE B2C / B2B	Business To Consumer
CN8	8536 50 80
eClass	V11.0 : 27144053

## Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001751A3090	1786-20-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint platinum	1786-20-500	1	piece
2CKA001751A3086	1786-21-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint bronze	1786-21-500	1	piece

2CKA001751A3081	1786-22G-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory	1786-22G-500	1	piece
2CKA001751A3078	1786-24G-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white	1786-24G-500	1	piece
2CKA001751A3080	1786-260-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint palladium	1786-260-500	1	piece
2CKA001751A3085	1786-266-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint titanium	1786-266-500	1	piece
2CKA001751A3093	1786-803-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint grey metallic - 63x63	1786-803-500	1	piece
2CKA001751A3079	1786-81-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint anthracite - 63x63	1786-81-500	1	piece
2CKA001751A3083	1786-82-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory white - 63x63	1786-82-500	1	piece
2CKA001751A3075	1786-83-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint aluminium silver - 63x63	1786-83-500	1	piece
2CKA001751A3116	1786-840-500 Cover Plates Switch/push button Single rocker Without imprint antique brass - 63x63	1786-840-500	1	piece
2CKA001751A3074	1786-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1786-84-500	1	piece
2CKA001751A3077	1786-866-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001751A3089	1786-884-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white matt - 63x63	1786-884-500	1	piece
2CKA001751A3094	1786-885-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint black matt - 63x63	1786-885-500	1	piece
2CKA001434A0448	2546-212 Rocker with legend Switch/push button Single rocker Neutral symbol white - Busch-Duro 2000	2546-212	1	piece
2CKA001434A0554	2546-214 Rocker with legend Switch/push button Single rocker Neutral symbol alpine white - Reflex SI	2546-214	1	piece
2CKA001731A2001	2506-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2506-212-500	1	piece
2CKA001731A0322	2506-212-506 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2506-212-506	1	piece
2CKA001731A1889	2506-212-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2506-212-507	1	piece
2CKA001731A1992	2506-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white	2506-214-500	1	piece
2CKA001731A1891	2506-214-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white	2506-214-507	1	piece
2CKA001731A1007	2506-215 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint black - Reflex SI	2506-215	1	piece
2CKA001731A4012	2506-217-101 Rocker Switch/push button Single rocker red - Reflex SI	2506-217-101	1	piece

2CKA001784A0032	8337-1 Illumination set Switch/push button White Incandescent lamp 24 V	8337-1	1	piece
2CKA001731A4007	1764 NLI-13-82 Rocker with labelling field Switch/push button Single push button green - 63x63	1764 NLI-13-82	1	piece
2CKA001731A1858	1764 NLI-22G Rocker with labelling field Switch/push button Single rocker ivory - alpha	1764 NLI-22G	1	piece
2CKA001731A1569	1764 NLI-24G Rocker with labelling field Switch/push button Single rocker studio white - alpha	1764 NLI-24G	1	piece
2CKA001731A1975	1764 NLI-803 Rocker with labelling field Switch/push button Single rocker grey metallic - 63x63	1764 NLI-803	1	piece
2CKA001731A1552	1764 NLI-81 Rocker with labelling field Switch/push button Single push button anthracite - 63x63	1764 NLI-81	1	piece
2CKA001731A1876	1764 NLI-82 Rocker with labelling field Switch/push button Single push button ivory white - 63x63	1764 NLI-82	1	piece
2CKA001731A1948	1764 NLI-83 Rocker with labelling field Switch/push button Single push button aluminium silver - 63x63	1764 NLI-83	1	piece
2CKA001731A1877	1764 NLI-84 Rocker with labelling field Switch/push button Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001731A2024	1764 NLI-840-500 Rocker Switch/push button Single rocker Without imprint antique brass - 63x63	1764 NLI-840- 500	1	piece
2CKA001731A1953	1764 NLI-866 Rocker with labelling field Switch/push button Single push button stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	1764 NLI-884 Rocker with labelling field Switch/push button Single push button studio white matt - 63x63	1764 NLI-884	1	piece
2CKA001731A1982	1764 NLI-885 Rocker with labelling field Switch/push button Single push button black matt - 63x63	1764 NLI-885	1	piece
2CKA001731A0355	2509-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2509-212-500	1	piece
2CKA001731A0900	2509-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2509-214	1	piece
2CKA001731A1995	2509-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white	2509-214-500	1	piece
2CKA001751A1625	1789-20 Rocker Switch/push button Single rocker platinum - alpha	1789-20	1	piece
2CKA001751A1716	1789-21 Rocker Switch/push button Single rocker bronze - alpha	1789-21	1	piece
2CKA001751A2490	1789-22G Rocker Switch/push button Single rocker ivory - alpha	1789-22G	1	piece
2CKA001751A2102	1789-24G Rocker Switch/push button Single rocker studio white - alpha	1789-24G	1	piece
2CKA001751A2825	1789-260 Rocker Switch/push button Single rocker palladium - alpha	1789-260	1	piece
2CKA001751A2836	1789-266 Rocker Switch/push button Single rocker titanium - alpha	1789-266	1	piece
2CKA001751A3013	1789-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789-803	1	piece
2CKA001751A2928	1789-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789-81	1	piece
2CKA001751A2813	1789-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789-82	1	piece
2CKA001751A2945	1789-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789-83	1	piece

2CKA001751A3118	1789-840-500 Cover Plates Switch/push button Single rocker Without imprint antique brass - 63x63	1789-840-500	1	piece
2CKA001751A3091	1789-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001751A2957	1789-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	1789-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789-884	1	piece
2CKA001751A3047	1789-885 Rocker Switch/push button Single rocker black matt - 63x63	1789-885	1	piece
2CKA001731A0272	2520 LI-212 Rocker Switch/push button Single rocker white - Busch-Duro 2000	2520 LI-212	1	piece
2CKA001731A1996	2520 LI-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" alpine white	2520 LI-214- 500	1	piece
2CKA001751A3185	2520 LI-803 Rocker Switch/push button Single rocker grey metallic - 63x63	2520 LI-803	1	piece
2CKA001751A3186	2520 LI-81 Rocker Switch/push button Single rocker anthracite - 63x63	2520 LI-81	1	piece
2CKA001751A3187	2520 LI-82 Rocker Switch/push button Single rocker ivory white - 63x63	2520 LI-82	1	piece
2CKA001751A3188	2520 LI-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	2520 LI-83	1	piece
2CKA001751A3191	2520 LI-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	2520 LI-884 Rocker Switch/push button Single rocker studio white matt - 63x63	2520 LI-884	1	piece
2CKA001751A3193	2520 LI-885 Rocker Switch/push button Single rocker black matt - 63x63	2520 LI-885	1	piece
2CKA001731A2000	2520-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2520-212-500	1	piece
2CKA001731A0413	2520-212-506 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white	2520-212-506	1	piece
2CKA001731A1994	2520-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white	2520-214-500	1	piece
2CKA001731A0561	2506 N-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2506 N-212	1	piece
2CKA001731A0520	2506 N-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2506 N-214	1	piece
2CKA001731A1445	2510 NLI-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2510 NLI-212	1	piece
2CKA001731A1452	2510 NLI-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2510 NLI-214	1	piece
2CKA001731A0330	2502-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Characters 0 and 1 white	2502-212-500	1	piece
2CKA001731A0884	2502-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2502-214	1	piece
2CKA001434A0455	2544-212 Rocker with legend Switch/push button Single rocker Neutral symbol white - Busch-Duro 2000	2544-212	1	piece
2CKA001434A0570	2544-214 Rocker with legend Switch/push button Single rocker Characters 0 and 1; neutral symbol alpine white - Reflex SI	2544-214	1	piece
2CKA001751A3146	1789 N-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789 N-803	1	piece

2CKA001751A3147	1789 N-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789 N-81	1	piece
2CKA001751A3148	1789 N-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789 N-82	1	piece
2CKA001751A3149	1789 N-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789 N-83	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3152	1789 N-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece
2CKA001751A3153	1789 N-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789 N-884	1	piece
2CKA001751A3154	1789 N-885 Rocker Switch/push button Single rocker black matt - 63x63	1789 N-885	1	piece
2CKA001751A1633	1789 LI-20 Rocker with legend Switch/push button Single rocker Symbol "light" platinum - alpha	1789 LI-20	1	piece
2CKA001751A1724	1789 LI-21 Rocker with legend Switch/push button Single rocker Symbol "light" bronze - alpha	1789 LI-21	1	piece
2CKA001751A2516	1789 LI-22G Rocker with legend Switch/push button Single rocker Symbol "light" ivory - alpha	1789 LI-22G	1	piece
2CKA001751A2201	1789 LI-24G Rocker with legend Switch/push button Single rocker Symbol "light" studio white - alpha	1789 LI-24G	1	piece
2CKA001751A2828	1789 LI-260 Rocker with legend Switch/push button Single rocker Symbol "light" palladium - alpha	1789 LI-260	1	piece
2CKA001751A2839	1789 LI-266 Rocker with legend Switch/push button Single rocker Symbol "light" titanium - alpha	1789 LI-266	1	piece
2CKA001753A0072	1789 LI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A4815	1789 LI-74 Cover plate with legend Switch/push button Single rocker Symbol "light" alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0187	1789 LI-774 Cover plate with legend Switch/push button Single rocker Symbol "light" studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	1789 LI-775 Cover plate with legend Switch/push button Single rocker Symbol "light" black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	1789 LI-783 Cover plate with legend Switch/push button Single rocker Symbol "arrows" aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	1789 LI-79 Cover plate with legend Switch/push button Single rocker Symbol "light" champagne metallic - impuls	1789 LI-79	1	piece
2CKA001751A3014	1789 LI-803 Rocker with legend Switch/push button Single rocker Symbol "light" grey metallic - 63x63	1789 LI-803	1	piece
2CKA001751A2931	1789 LI-81 Rocker with legend Switch/push button Single rocker Symbol "light" anthracite - 63x63	1789 LI-81	1	piece
2CKA001751A2745	1789 LI-82 Rocker with legend Switch/push button Single rocker Symbol "light" ivory white - 63x63	1789 LI-82	1	piece
2CKA001751A2951	1789 LI-83 Rocker with legend Switch/push button Single rocker Symbol "light" aluminium silver - 63x63	1789 LI-83	1	piece
2CKA001751A3084	1789 LI-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece

2CKA001751A2958	1789 LI-866 Rocker with legend Switch/push button Single rocker Symbol "light" stainless steel - Pure Stainless Steel	1789 LI-866	1	piece
2CKA001751A3031	1789 LI-884 Rocker with legend Switch/push button Single rocker Symbol "light" studio white matt - 63x63	1789 LI-884	1	piece
2CKA001751A3045	1789 LI-885 Rocker with legend Switch/push button Single rocker Symbol "light" black matt - 63x63	1789 LI-885	1	piece
2CKA001731A4011	1764 NLI-12-82-101 Rocker with labelling field Switch/push button Single push button red - 63x63	1764 NLI-12-82-101	1	piece
2CKA001751A1674	1788-20 Rocker Switch/push button Single rocker platinum - alpha	1788-20	1	piece
2CKA001751A1765	1788-21 Rocker Switch/push button Single rocker bronze - alpha	1788-21	1	piece
2CKA001751A2557	1788-22G Rocker Switch/push button Single rocker ivory - alpha	1788-22G	1	piece
2CKA001751A2326	1788-24G Rocker Switch/push button Single rocker studio white - alpha	1788-24G	1	piece
2CKA001751A2823	1788-260 Rocker Switch/push button Single rocker palladium - alpha	1788-260	1	piece
2CKA001751A2834	1788-266 Rocker Switch/push button Single rocker titanium - alpha	1788-266	1	piece
2CKA001751A3017	1788-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1788-803	1	piece
2CKA001751A2927	1788-81 Rocker Switch/push button Single rocker anthracite - 63x63	1788-81	1	piece
2CKA001751A2742	1788-82 Rocker Switch/push button Single rocker ivory white - 63x63	1788-82	1	piece
2CKA001751A2954	1788-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1788-83	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2961	1788-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	1788-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1788-884	1	piece
2CKA001751A3042	1788-885 Rocker Switch/push button Single rocker black matt - 63x63	1788-885	1	piece
2CKA001751A1690	1789 H-20 Rocker with legend Switch/push button Single rocker Heizung platinum - alpha	1789 H-20	1	piece
2CKA001751A1781	1789 H-21 Rocker with legend Switch/push button Single rocker Heizung bronze - alpha	1789 H-21	1	piece
2CKA001751A2573	1789 H-22G Rocker with legend Switch/push button Single rocker Heizung ivory - alpha	1789 H-22G	1	piece
2CKA001751A2375	1789 H-24G Rocker with legend Switch/push button Single rocker Heizung studio white - alpha	1789 H-24G	1	piece
2CKA001751A2826	1789 H-260 Rocker with legend Switch/push button Single rocker Heizung palladium - alpha	1789 H-260	1	piece
2CKA001751A2837	1789 H-266 Rocker with legend Switch/push button Single rocker Heizung titanium - alpha	1789 H-266	1	piece
2CKA001753A0068	1789 H-72-101 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	1789 H-74-101 Cover plate with labelling field Switch/push button Single rocker alpine white - impuls	1789 H-74-101	1	piece
2CKA001753A0184	1789 H-774-101 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0154	1789 H-775-101 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1789 H-775-101	1	piece

2CKA001753A0069	1789 H-783-101 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1789 H-783- 101	1	piece
2CKA001753A6612	1789 H-79-101 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001751A3019	1789 H-803 Rocker with legend Switch/push button Single rocker Heizung grey metallic - 63x63	1789 H-803	1	piece
2CKA001751A2929	1789 H-81 Rocker with legend Switch/push button Single rocker Heizung anthracite - 63x63	1789 H-81	1	piece
2CKA001751A2743	1789 H-82 Rocker with legend Switch/push button Single rocker Heizung ivory white - 63x63	1789 H-82	1	piece
2CKA001751A2955	1789 H-83 Rocker with legend Switch/push button Single rocker Heizung aluminium silver - 63x63	1789 H-83	1	piece
2CKA001751A2751	1789 H-84 Rocker with legend Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2963	1789 H-866 Rocker with legend Switch/push button Single rocker Heizung stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	1789 H-884 Rocker with legend Switch/push button Single rocker Heizung studio white matt - 63x63	1789 H-884	1	piece
2CKA001751A3043	1789 H-885 Rocker with legend Switch/push button Single rocker Heizung black matt - 63x63	1789 H-885	1	piece
2CKA001751A1658	1789 TR-20 Rocker with legend Switch/push button Single rocker Symbol "key/door" platinum	1789 TR-20	1	piece
2CKA001751A1740	1789 TR-21 Rocker Switch/push button Single rocker bronze - alpha	1789 TR-21	1	piece
2CKA001751A2532	1789 TR-22G Rocker Switch/push button Single rocker ivory - alpha	1789 TR-22G	1	piece
2CKA001751A2268	1789 TR-24G Rocker Switch/push button Single rocker studio white - alpha	1789 TR-24G	1	piece
2CKA001751A2830	1789 TR-260 Rocker Switch/push button Single rocker palladium - alpha	1789 TR-260	1	piece
2CKA001751A2841	1789 TR-266 Rocker Switch/push button Single rocker titanium - alpha	1789 TR-266	1	piece
2CKA001751A3016	1789 TR-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789 TR-803	1	piece
2CKA001751A2933	1789 TR-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789 TR-81	1	piece
2CKA001751A2747	1789 TR-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789 TR-82	1	piece
2CKA001751A2953	1789 TR-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789 TR-83	1	piece
2CKA001751A2755	1789 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A2960	1789 TR-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789 TR-866	1	piece
2CKA001751A3032	1789 TR-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789 TR-884	1	piece
2CKA001751A3046	1789 TR-885 Rocker Switch/push button Single rocker black matt - 63x63	1789 TR-885	1	piece
2CKA001751A1641	1789 KI-20 Rocker Switch/push button Single rocker platinum - alpha	1789 KI-20	1	piece
2CKA001751A1732	1789 KI-21 Rocker Switch/push button Single rocker bronze - alpha	1789 KI-21	1	piece
2CKA001751A2524	1789 KI-22G Rocker with legend Switch/push button Single rocker Symbol "bell" ivory - alpha	1789 KI-22G	1	piece



2CKA001751A2235	1789 KI-24G Rocker with legend Switch/push button Single rocker Symbol "bell" studio white - alpha	1789 KI-24G	1	piece
2CKA001751A2829	1789 KI-260 Rocker with legend Switch/push button Single rocker Symbol "bell" palladium - alpha	1789 KI-260	1	piece
2CKA001751A2840	1789 KI-266 Rocker with legend Switch/push button Single rocker Symbol "bell" titanium - alpha	1789 KI-266	1	piece
2CKA001751A3015	1789 KI-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789 KI-803	1	piece
2CKA001751A2932	1789 KI-81 Rocker with legend Switch/push button Single rocker Symbol "bell" anthracite - 63x63	1789 KI-81	1	piece
2CKA001751A2746	1789 KI-82 Rocker with legend Switch/push button Single rocker Symbol "bell" ivory white - 63x63	1789 KI-82	1	piece
2CKA001751A2952	1789 KI-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789 KI-83	1	piece
2CKA001751A2754	1789 KI-84 Rocker with legend Switch/push button Single rocker Symbol "bell" studio white - 63x63	1789 KI-84	1	piece
2CKA001751A2959	1789 KI-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789 KI-866	1	piece
2CKA001751A3030	1789 KI-884 Rocker with legend Switch/push button Single rocker Symbol "bell" studio white matt - 63x63	1789 KI-884	1	piece
2CKA001751A3044	1789 KI-885 Rocker with legend Switch/push button Single rocker Symbol "bell" black matt - 63x63	1789 KI-885	1	piece
2CKA001740A0071	3050 Accessories 1 gang blue	3050	1	piece
2CKA002148A0120	2148 Extension of Claws	2148	1	piece
2CKA001714A0295	2144 LI Label Braille Symbol "light"	2144 LI	1	piece
2CKA001740A0061	3048/10 Mounting box set 1 gang with Plastering moulding tool, positioning device, RFID-chip blue - Busch-axcent	3048/10	1	piece
2CKA001740A0072	3058/10 Mounting box set 1 gang blue - Busch-axcent	3058/10	1	piece
2CKA001740A0083	3068/10 Mounting box set blue - Busch-axcent	3068/10	1	piece
2CKA001784A0545	8350 Illumination set Switch/push button Orange Neon lamp 230 V	8350	1	piece
2CKA001784A0560	8352 Illumination set Switch/push button Orange Neon lamp 230 V	8352	1	piece
2CKA001784A0578	8353 Illumination set Switch/push button Orange Neon lamp 230 V	8353	1	piece
2CKA001784A0552	8360 Illumination set Orange Neon lamp 230 V red	8360	1	piece
2CKA001784A0586	8362 Illumination set Switch/push button Orange Neon lamp 230 V yellow	8362	1	piece
2CKA001784A0594	8363 Illumination set Switch/push button Orange Neon lamp 230 V white	8363	1	piece
2CKA001784A0024	8333-1 Illumination set Switch/push button White Incandescent lamp 3 ... 8 V - Busch-Duro 2000 SM	8333-1	1	piece
2CKA001784A0164	8344-1 Illumination set Switch/push button White Incandescent lamp 8 V	8344-1	1	piece
2CKA001784A0289	8345-1 Illumination set Switch/push button White Incandescent lamp 12 V	8345-1	1	piece
2CKA001754A4373	1721 KA-20 Cover Frame 1gang(s) platinum - alpha exclusive	1721 KA-20	1	piece
2CKA001754A4382	1721 KA-21 Cover Frame 1gang(s) bronze - alpha exclusive	1721 KA-21	1	piece
2CKA001754A3831	1721 KA-22G Cover Frame 1gang(s) ivory - alpha exclusive	1721 KA-22G	1	piece

2CKA001754A2965	1721 KA-24G Cover Frame 1gang(s) studio white - alpha exclusive	1721 KA-24G	1	piece
2CKA001754A4520	1721 KA-260-500 Cover Frame 1gang(s) palladium - alpha exclusive	1721 KA-260-500	1	piece
2CKA001754A4509	1721 KA-266-500 Cover Frame 1gang(s) titanium - alpha exclusive	1721 KA-266-500	1	piece
2CKA001754A4516	1721 NS-212-500 Cover Frame 1gang(s) white - Busch-Duro 2000	1721 NS-212-500	1	piece
2CKA001754A4496	1721 NS-214-500 Cover Frame 1gang(s) alpine white - Reflex SI	1721 NS-214-500	1	piece
2CKA001754A4093	1721 NSKA-212 Cover Frame 1gang(s) white - Busch-Duro 2000 SI Linear	1721 NSKA-212	1	piece
2CKA001754A4497	1721 NSKA-214-500 Cover Frame 1gang(s) alpine white - Reflex SI Linear	1721 NSKA-214-500	1	piece
2CKA001754A4065	1721 NSKA-24G Cover Frame 1gang(s) studio white - alpha exclusive	1721 NSKA-24G	1	piece
2CKA001754A4713	1721-12-182K-101 Cover Frame 1gang(s) red - future linear	1721-12-182K-101	1	piece
2CKA001754A4240	1721-181K Cover Frame 1gang(s) anthracite - future linear	1721-181K	1	piece
2CKA001754A4168	1721-182 Cover Frame 1gang(s) ivory white - future	1721-182	1	piece
2CKA001754A4506	1721-182K-500 Cover Frame 1gang(s) ivory white - future linear	1721-182K-500	1	piece
2CKA001754A4529	1721-183K-500 Cover Frame 1gang(s) aluminium silver - future linear	1721-183K-500	1	piece
2CKA001754A4173	1721-184 Cover Frame 1gang(s) studio white - future	1721-184	1	piece
2CKA001754A4527	1721-184 NSK-500 Cover Frame 1gang(s) studio white - future linear	1721-184 NSK-500	1	piece
2CKA001754A4504	1721-184-500 Cover Frame 1gang(s) studio white - future	1721-184-500	1	piece
2CKA001754A4498	1721-184K-500 Cover Frame 1gang(s) studio white - future linear	1721-184K-500	1	piece
2CKA001754A4521	1721-20-500 Cover Frame 1gang(s) platinum - alpha nea	1721-20-500	1	piece
2CKA001754A4522	1721-21-500 Cover Frame 1gang(s) bronze - alpha nea	1721-21-500	1	piece
2CKA001754A4775	1721-223 Cover Frame 1gang(s) glass purple - Busch-axcent	1721-223	1	piece
2CKA001754A4760	1721-225 Cover Frame 1gang(s) glass sun - Busch-axcent	1721-225	1	piece
2CKA001754A4770	1721-226 Cover Frame 1gang(s) glass avocado - Busch-axcent	1721-226	1	piece
2CKA001754A4765	1721-227 Cover Frame 1gang(s) glass coral - Busch-axcent	1721-227	1	piece
2CKA001754A4755	1721-228 Cover Frame 1gang(s) glass ocean - Busch-axcent	1721-228	1	piece
2CKA001754A4780	1721-229 Cover Frame 1gang(s) glass oyster - Busch-axcent	1721-229	1	piece
2CKA001754A4512	1721-22G-500 Cover Frame 1gang(s) ivory - alpha nea	1721-22G-500	1	piece
2CKA001754A4790	1721-243 Cover Frame 1gang(s) paper brown - Busch-axcent	1721-243	1	piece
2CKA001754A4800	1721-245 Cover Frame 1gang(s) glass black - Busch-axcent	1721-245	1	piece
2CKA001754A4785	1721-248 Cover Frame 1gang(s) paper blue - Busch-axcent	1721-248	1	piece
2CKA001754A4503	1721-24G-500 Cover Frame 1gang(s) studio white - alpha nea	1721-24G-500	1	piece
2CKA001754A4400	1721-260 Cover Frame 1gang(s) palladium - alpha nea	1721-260	1	piece

2CKA001754A4391	1721-266 Cover Frame 1gang(s) titanium - alpha nea	1721-266	1	piece
2CKA001754A4688	1721-270-500 Cover Frame 1gang(s) platinum - Busch-axcent	1721-270-500	1	piece
2CKA001754A4708	1721-275-500 Cover Frame 1gang(s) black matt - Busch-axcent	1721-275-500	1	piece
2CKA001754A4698	1721-276-500 Cover Frame 1gang(s) titanium - Busch-axcent	1721-276-500	1	piece
2CKA001754A4437	1721-280 Cover Frame 1gang(s) white glass - Busch-axcent pur	1721-280	1	piece
2CKA001754A4409	1721-281 Cover Frame 1gang(s) black - Busch- axcent	1721-281	1	piece
2CKA001753A4126	1721-281/11 Cover Frame 1gang(s) black - Busch-axcent flat	1721-281/11	1	piece
2CKA001754A4543	1721-283 Cover Frame 1gang(s) brown glass - Busch-axcent	1721-283	1	piece
2CKA001754A4331	1721-284 Cover Frame 1gang(s) studio white - Busch-axcent	1721-284	1	piece
2CKA001753A4121	1721-284/11 Cover Frame 1gang(s) studio white - Busch-axcent flat	1721-284/11	1	piece
2CKA001754A4334	1721-285 Cover Frame 1gang(s) yellow - Busch- axcent	1721-285	1	piece
2CKA001754A4337	1721-286 Cover Frame 1gang(s) green - Busch- axcent	1721-286	1	piece
2CKA001754A4340	1721-287 Cover Frame 1gang(s) red - Busch- axcent	1721-287	1	piece
2CKA001754A4343	1721-288 Cover Frame 1gang(s) blue - Busch- axcent	1721-288	1	piece
2CKA001754A4805	1721-290 Cover Frame 1gang(s) slate grey - Busch-axcent	1721-290	1	piece
2CKA001754A4471	1721-291-500 Cover Frame 1gang(s) entrée-grey - Busch-axcent	1721-291-500	1	piece
2CKA001754A4491	1721-295-500 Cover Frame 1gang(s) château- black - Busch-axcent	1721-295-500	1	piece
2CKA001754A4795	1721-298 Cover Frame 1gang(s) concrete grey - Busch-axcent	1721-298	1	piece
2CKA001754A4481	1721-299-500 Cover Frame 1gang(s) maison- beige - Busch-axcent	1721-299-500	1	piece
2CKA001754A4535	1721-80-500 Cover Frame 1gang(s) chrome - solo	1721-80-500	1	piece
2CKA001754A4538	1721-80G-500 Cover Frame 1gang(s) chrome gloss - solo	1721-80G-500	1	piece
2CKA001754A4442	1721-811 Cover Frame 1gang(s) white glass - carat	1721-811	1	piece
2CKA001754A4820	1721-815 Cover Frame 1gang(s) porcelain anthracite - carat	1721-815	1	piece
2CKA001754A4258	1721-821 Cover Frame 1gang(s) bronze - carat	1721-821	1	piece
2CKA001754A4356	1721-823-101 Cover Frame 1gang(s) gold - carat	1721-823-101	1	piece
2CKA001754A4322	1721-825 Cover Frame 1gang(s) glass black - carat	1721-825	1	piece
2CKA001754A4360	1721-826-101 Cover Frame 1gang(s) chrome - carat	1721-826-101	1	piece
2CKA001754A4605	1721-831-500 Cover Frame 1gang(s) anthracite - Busch-Dynasty	1721-831-500	1	piece
2CKA001754A4600	1721-832-500 Cover Frame 1gang(s) ivory white - Busch-Dynasty	1721-832-500	1	piece
2CKA001754A4575	1721-833-500 Cover Frame 1gang(s) polished brass decor anthracite - Busch-Dynasty	1721-833-500	1	piece
2CKA001754A4565	1721-835-500 Cover Frame 1gang(s) polished brass anthracite - Busch-Dynasty	1721-835-500	1	piece
2CKA001754A4570	1721-836-500 Cover Frame 1gang(s) polished brass decor ivory white - Busch-Dynasty	1721-836-500	1	piece

2CKA001754A4560	1721-838-500 Cover Frame 1gang(s) polished brass ivory white - Busch-Dynasty	1721-838-500	1	piece
2CKA001754A4595	1721-843-500 Cover Frame 1gang(s) antique brass decor anthracite - Busch-Dynasty	1721-843-500	1	piece
2CKA001754A4536	1721-84-500 Cover Frame 1gang(s) studio white - solo	1721-84-500	1	piece
2CKA001754A4585	1721-845-500 Cover Frame 1gang(s) antique brass anthracite - Busch-Dynasty	1721-845-500	1	piece
2CKA001754A4590	1721-846-500 Cover Frame 1gang(s) antique brass decor ivory white - Busch-Dynasty	1721-846-500	1	piece
2CKA001754A4580	1721-848-500 Cover Frame 1gang(s) antique brass ivory white - Busch-Dynasty	1721-848-500	1	piece
2CKA001754A4254	1721-860 Cover Frame 1gang(s) stainless steel - carat	1721-860	1	piece
2CKA001754A4500	1721-866K-500 Cover Frame 1gang(s) stainless steel - Pure Stainless Steel	1721-866K-500	1	piece
2CKA001754A4531	1721-884K-500 Cover Frame 1gang(s) studio white matt - future linear	1721-884K-500	1	piece
2CKA001754A4532	1721-885K-500 Cover Frame 1gang(s) black matt - future linear	1721-885K-500	1	piece
2CKA001754A4374	1722 KA-20 Cover Frame 2gang(s) platinum - alpha exclusive	1722 KA-20	1	piece
2CKA001754A4383	1722 KA-21 Cover Frame 2gang(s) bronze - alpha exclusive	1722 KA-21	1	piece
2CKA001754A3849	1722 KA-22G Cover Frame 2gang(s) ivory - alpha exclusive	1722 KA-22G	1	piece
2CKA001754A2999	1722 KA-24G Cover Frame 2gang(s) studio white - alpha exclusive	1722 KA-24G	1	piece
2CKA001754A4116	1722 KA-260 Cover Frame 2gang(s) palladium - alpha exclusive	1722 KA-260	1	piece
2CKA001754A4523	1722 KA-266-500 Cover Frame 2gang(s) titanium - alpha exclusive	1722 KA-266-500	1	piece
2CKA001754A2239	1722 NS-212 Cover Frame 2gang(s) white - Busch-Duro 2000	1722 NS-212	1	piece
2CKA001754A2163	1722 NS-214 Cover Frame 2gang(s) alpine white - Reflex SI	1722 NS-214	1	piece
2CKA001754A4094	1722 NSKA-212 Cover Frame 2gang(s) white - Busch-Duro 2000 SI Linear	1722 NSKA-212	1	piece
2CKA001754A4059	1722 NSKA-214 Cover Frame 2gang(s) alpine white - Reflex SI Linear	1722 NSKA-214	1	piece
2CKA001754A4066	1722 NSKA-24G Cover Frame 2gang(s) studio white - alpha exclusive	1722 NSKA-24G	1	piece
2CKA001754A4714	1722-12-182K-101 Cover Frame 2gang(s) red - future linear	1722-12-182K-101	1	piece
2CKA001754A4241	1722-181K Cover Frame 2gang(s) anthracite - future linear	1722-181K	1	piece
2CKA001754A4169	1722-182 Cover Frame 2gang(s) ivory white - future	1722-182	1	piece
2CKA001754A4231	1722-182K Cover Frame 2gang(s) ivory white - future linear	1722-182K	1	piece
2CKA001754A4530	1722-183K-500 Cover Frame 2gang(s) aluminium silver - future linear	1722-183K-500	1	piece
2CKA001754A4174	1722-184 Cover Frame 2gang(s) studio white - future	1722-184	1	piece
2CKA001754A4508	1722-184-500 Cover Frame 2gang(s) studio white - future	1722-184-500	1	piece
2CKA001754A4499	1722-184K-500 Cover Frame 2gang(s) studio white - future linear	1722-184K-500	1	piece
2CKA001754A4524	1722-20-500 Cover Frame 2gang(s) platinum - alpha nea	1722-20-500	1	piece
2CKA001754A1710	1722-21 Cover Frame 2gang(s) bronze - alpha nea	1722-21	1	piece

2CKA001754A4776	1722-223 Cover Frame 2gang(s) glass purple - Busch-axcent	1722-223	1	piece
2CKA001754A4761	1722-225 Cover Frame 2gang(s) glass sun - Busch-axcent	1722-225	1	piece
2CKA001754A4771	1722-226 Cover Frame 2gang(s) glass avocado - Busch-axcent	1722-226	1	piece
2CKA001754A4766	1722-227 Cover Frame 2gang(s) glass coral - Busch-axcent	1722-227	1	piece
2CKA001754A4756	1722-228 Cover Frame 2gang(s) glass ocean - Busch-axcent	1722-228	1	piece
2CKA001754A4781	1722-229 Cover Frame 2gang(s) glass oyster - Busch-axcent	1722-229	1	piece
2CKA001754A3799	1722-22G Cover Frame 2gang(s) ivory - alpha nea	1722-22G	1	piece
2CKA001754A4791	1722-243 Cover Frame 2gang(s) paper brown - Busch-axcent	1722-243	1	piece
2CKA001754A4801	1722-245 Cover Frame 2gang(s) glass black - Busch-axcent	1722-245	1	piece
2CKA001754A4786	1722-248 Cover Frame 2gang(s) paper blue - Busch-axcent	1722-248	1	piece
2CKA001754A4511	1722-24G-500 Cover Frame 2gang(s) studio white - alpha nea	1722-24G-500	1	piece
2CKA001754A4401	1722-260 Cover Frame 2gang(s) palladium - alpha nea	1722-260	1	piece
2CKA001754A4392	1722-266 Cover Frame 2gang(s) titanium - alpha nea	1722-266	1	piece
2CKA001754A4689	1722-270-500 Cover Frame 2gang(s) platinum - Busch-axcent	1722-270-500	1	piece
2CKA001754A4709	1722-275-500 Cover Frame 2gang(s) black matt - Busch-axcent	1722-275-500	1	piece
2CKA001754A4699	1722-276-500 Cover Frame 2gang(s) titanium - Busch-axcent	1722-276-500	1	piece
2CKA001754A4438	1722-280 Cover Frame 2gang(s) white glass - Busch-axcent pur	1722-280	1	piece
2CKA001754A4410	1722-281 Cover Frame 2gang(s) black - Busch-axcent	1722-281	1	piece
2CKA001753A4127	1722-281/11 Cover Frame 2gang(s) black - Busch-axcent flat	1722-281/11	1	piece
2CKA001754A4544	1722-283 Cover Frame 2gang(s) brown glass - Busch-axcent	1722-283	1	piece
2CKA001754A4332	1722-284 Cover Frame 2gang(s) studio white - Busch-axcent	1722-284	1	piece
2CKA001753A4122	1722-284/11 Cover Frame 2gang(s) studio white - Busch-axcent flat	1722-284/11	1	piece
2CKA001754A4335	1722-285 Cover Frame 2gang(s) yellow - Busch-axcent	1722-285	1	piece
2CKA001754A4338	1722-286 Cover Frame 2gang(s) green - Busch-axcent	1722-286	1	piece
2CKA001754A4341	1722-287 Cover Frame 2gang(s) red - Busch-axcent	1722-287	1	piece
2CKA001754A4344	1722-288 Cover Frame 2gang(s) blue - Busch-axcent	1722-288	1	piece
2CKA001754A4806	1722-290 Cover Frame 2gang(s) slate grey - Busch-axcent	1722-290	1	piece
2CKA001754A4472	1722-291-500 Cover Frame 2gang(s) entrée-grey - Busch-axcent	1722-291-500	1	piece
2CKA001754A4492	1722-295-500 Cover Frame 2gang(s) château-black - Busch-axcent	1722-295-500	1	piece
2CKA001754A4796	1722-298 Cover Frame 2gang(s) concrete grey - Busch-axcent	1722-298	1	piece
2CKA001754A4482	1722-299-500 Cover Frame 2gang(s) maison-beige - Busch-axcent	1722-299-500	1	piece

2CKA001754A4537	1722-80-500 Cover Frame 2gang(s) chrome - solo	1722-80-500	1	piece
2CKA001754A4327	1722-80G Cover Frame 2gang(s) chrome gloss - solo	1722-80G	1	piece
2CKA001754A4443	1722-811 Cover Frame 2gang(s) white glass - carat	1722-811	1	piece
2CKA001754A4821	1722-815 Cover Frame 2gang(s) porcelain anthracite - carat	1722-815	1	piece
2CKA001754A4259	1722-821 Cover Frame 2gang(s) bronze - carat	1722-821	1	piece
2CKA001754A4357	1722-823-101 Cover Frame 2gang(s) gold - carat	1722-823-101	1	piece
2CKA001754A4323	1722-825 Cover Frame 2gang(s) glass black - carat	1722-825	1	piece
2CKA001754A4361	1722-826-101 Cover Frame 2gang(s) chrome - carat	1722-826-101	1	piece
2CKA001754A4606	1722-831-500 Cover Frame 2gang(s) anthracite - Busch-Dynasty	1722-831-500	1	piece
2CKA001754A4601	1722-832-500 Cover Frame 2gang(s) ivory white - Busch-Dynasty	1722-832-500	1	piece
2CKA001754A4576	1722-833-500 Cover Frame 2gang(s) polished brass decor anthracite - Busch-Dynasty	1722-833-500	1	piece
2CKA001754A4566	1722-835-500 Cover Frame 2gang(s) polished brass anthracite - Busch-Dynasty	1722-835-500	1	piece
2CKA001754A4571	1722-836-500 Cover Frame 2gang(s) polished brass decor ivory white - Busch-Dynasty	1722-836-500	1	piece
2CKA001754A4561	1722-838-500 Cover Frame 2gang(s) polished brass ivory white - Busch-Dynasty	1722-838-500	1	piece
2CKA001754A4596	1722-843-500 Cover Frame 2gang(s) antique brass decor anthracite - Busch-Dynasty	1722-843-500	1	piece
2CKA001754A4539	1722-84-500 Cover Frame 2gang(s) studio white - solo	1722-84-500	1	piece
2CKA001754A4586	1722-845-500 Cover Frame 2gang(s) antique brass anthracite - Busch-Dynasty	1722-845-500	1	piece
2CKA001754A4591	1722-846-500 Cover Frame 2gang(s) antique brass decor ivory white - Busch-Dynasty	1722-846-500	1	piece
2CKA001754A4581	1722-848-500 Cover Frame 2gang(s) antique brass ivory white - Busch-Dynasty	1722-848-500	1	piece
2CKA001754A4255	1722-860 Cover Frame 2gang(s) stainless steel - carat	1722-860	1	piece
2CKA001754A4501	1722-866K-500 Cover Frame 2gang(s) stainless steel - Pure Stainless Steel	1722-866K-500	1	piece
2CKA001754A4415	1722-884K Cover Frame 2gang(s) studio white matt - future linear	1722-884K	1	piece
2CKA001754A4534	1722-885K-500 Cover Frame 2gang(s) black matt - future linear	1722-885K-500	1	piece
2CKA001754A4376	1723 KA-20 Cover Frame 3gang(s) platinum - alpha exclusive	1723 KA-20	1	piece
2CKA001754A4385	1723 KA-21 Cover Frame 3gang(s) bronze - alpha exclusive	1723 KA-21	1	piece
2CKA001754A3856	1723 KA-22G Cover Frame 3gang(s) ivory - alpha exclusive	1723 KA-22G	1	piece
2CKA001754A3021	1723 KA-24G Cover Frame 3gang(s) studio white - alpha exclusive	1723 KA-24G	1	piece
2CKA001754A4118	1723 KA-260 Cover Frame 3gang(s) palladium - alpha exclusive	1723 KA-260	1	piece
2CKA001754A4127	1723 KA-266 Cover Frame 3gang(s) titanium - alpha exclusive	1723 KA-266	1	piece
2CKA001754A3708	1723 NS-212 Cover Frame 3gang(s) white - Busch-Duro 2000	1723 NS-212	1	piece
2CKA001754A3724	1723 NS-214 Cover Frame 3gang(s) alpine white - Reflex SI	1723 NS-214	1	piece
2CKA001754A4096	1723 NSKA-212 Cover Frame 3gang(s) white - Busch-Duro 2000 SI Linear	1723 NSKA-212	1	piece

2CKA001754A4061	1723 NSKA-214 Cover Frame 3gang(s) alpine white - Reflex SI Linear	1723 NSKA-214	1	piece
2CKA001754A4068	1723 NSKA-24G Cover Frame 3gang(s) studio white - alpha exclusive	1723 NSKA- 24G	1	piece
2CKA001754A4242	1723-181K Cover Frame 3gang(s) anthracite - future linear	1723-181K	1	piece

---

## Catégories

---

Produits basse tension → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts

