

Installation Manual

● **Type : DRA DIN rail power supply (Series : DRA-40, DRA-60)**


| | | |
|-----------|--------------------------------|-------------------|
| DRA-40-12 | INPUT: 100-240VAC 0.8A 50/60Hz | OUTPUT: 12V 3.34A |
| DRA-40-24 | INPUT: 100-240VAC 0.8A 50/60Hz | OUTPUT: 24V 1.7A |
| DRA-60-12 | INPUT: 100-240VAC 1.3A 50/60Hz | OUTPUT: 12V 5A |
| DRA-60-24 | INPUT: 100-240VAC 1.3A 50/60Hz | OUTPUT: 24V 2.5A |

● **Introduction**

DRA is a DIN rail power supply series featuring adjustable output current. Users are able to set its output current to a range of 10% - 100% of rated current via 1-10Vdc, PWM signal or resistance. Like other Mean Well's DIN series, they can be mounted on a TS35 Standard DIN rail.

● **Installation**

- (1) Always allow good ventilation clearances, 5mm left and right, 40mm above and 20mm below, around the unit in use to prevent it from overheating. Also a 10-15 cm clearance must be kept when the adjacent device is a heat source.
- (2) The appropriate mounting orientation for the unit is vertical, the input terminals at the bottom and output on the top. Mounting orientations other than that, such as upside down, horizontal, or table-top mounting, is not allowed.

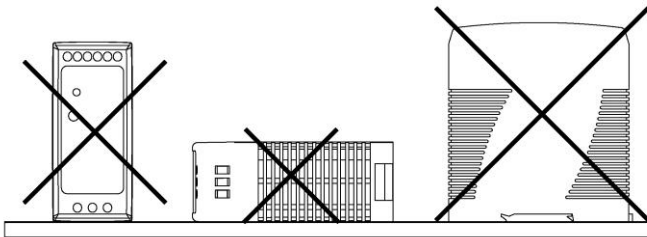

- (3) Use copper wire only, and recommended wires are shown as below.

| AWG | 18 | 16 | 14 | 12 |
|---|-----|-----|-----|-----|
| Rated Current of Equipment (Amp) | 7 | 10 | 15 | 20 |
| Cross-section of Lead(mm ²) | 0.8 | 1.3 | 2.1 | 3.3 |
| Note : Current each wire carries should be de-rated to 80% of the current suggested above when using 4-6 wires connected to the unit. | | | | |

Make sure that all strands of each stranded wire enter the terminal connection and the screw terminals are securely fixed to prevent poor contact. If the power supply possesses multi-output terminals, please make sure each contact is connected to wires to prevent too much current stress on a single contact.

- (4) Use wires that can withstand temperatures of at least 80°C, such as UL1007.
- (5) Recommended wire strapping length is 5mm (0.197").
- (6) Recommended screwdriver is 3mm, slotted type.
- (7) The recommended torque setting for terminals(TB1) is 5 kgf-cm (4.4 Lb-in), terminals(TB2) is 5.8 kgf-cm (5 Lb-in).
- (8) Each unit requires 0.15mA when dimming function is used. Please make sure your controller is capable of driving the units.

Installation Manual

(9) Suggested fuse and maximum number of the DRA that can be connected to a circuit breaker at 230V are shown as below.

| Model | Fuse | Circuit breaker | |
|--------|-------------|-----------------|-----|
| | | C16 | D16 |
| DRA-40 | T2.5A/L250V | 11 | 21 |
| DRA-60 | T2.5A/L250V | 8 | 16 |

(10) Mounting Instruction :


Mount as shown in figure only, with input terminals down, or else sufficient cooling will not be possible.

Admissible DIN rail : TS35/7.5 or TS35/15

For rail fastening :



- (a) Tilt the unit slightly rearwards.
- (b) Fit the unit over top hat rail.
- (c) Slide it downward until it hits the stop.
- (d) Press against the bottom for locking.
- (e) Shake the unit slightly to check the locking action.

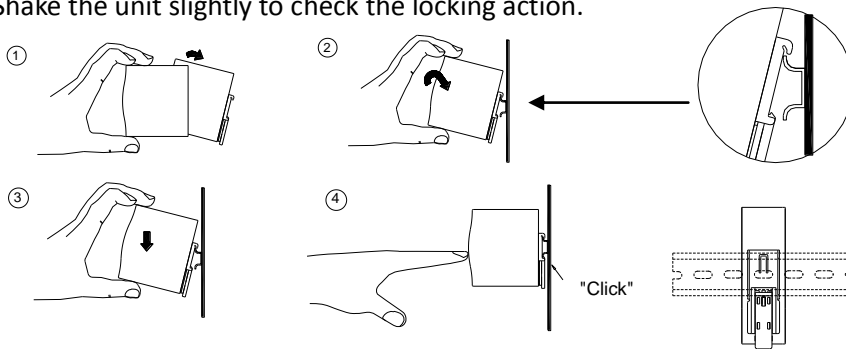

(11) For other information about the products, please refer to www.meanwell.com for details.

● **Warning / Caution !!**

- (1) Risk of electrical shock and energy hazard. All failure should be examined by a qualified technician. Please do not remove the case of the power supply by yourself!
- (2) Risk of electric arcs and electric shock (danger to life). Connecting both the primary and the secondary sides together is not allowed.
- (3) Risk of burn hazard. Do not touch the unit in operation and shortly after disconnection!
- (4) Risk of fire and short circuit. The openings should be protected from foreign objects or dripping liquids.
- (5) Only install the unit in a pollution degree 2 environment (Note.1).
- (6) Please do not install the unit in places with high moisture or near the water.
- (7) The maximum operating temperature is 45°C for the DRA-60-12, 50°C for the DRA-60-24, DRC-60A and DRC-60B, 55°C for the DRA-40-12/24, DRC-40A and DRC-40B, please do not install the unit in places with high ambient temperature or near fire source.
- (8) The FG (⊕) must be connected to PE (Protective Earth).
- (9) Output current and output wattage must not exceed the rated value on its specification.



Installation Manual

(10) Disconnect system from supply voltage:

Before commencing any installation, maintenance or modification work: Disconnect your system from supply voltage. Make sure that inadvertent connection in circuit will be impossible!

Note.1: Pollution Degree 2 applies where there is only non-conductive pollution that might temporarily become conductive due to occasional condensation. Generally refer to dry, well-ventilated locations, such as control cabinets.

Manufacturer :

MEAN WELL ENTERPRISES Co., LTD.
No.28, Wuquan 3rd Rd., Wugu Dist.,
New Taipei City 24891, Taiwan
Tel: +886-2-2299-6100
Web: www.meanwell.com

Branch Office :

China

MEAN WELL (GUANGZHOU)
ENTERPRISES Co., LTD.
2F, A Building, Yuean Industry Park,
Huangcun, Dongpu Yown, Tianhe
District, Gungzhou, China
Post Code: 510660
Tel: +86-20-2887-1200
Web: www.meanwell.com.cn

U.S.A.

MEAN WELL USA, INC.
44030 Fremont Blvd., Fremont,
CA 94538, U.S.A.
Tel: +1-510-683-8886
Web: www.meanwellusa.com

Europe


MEAN WELL EUROPE B.V.
Langs de Werf 8, 1185XT
Amstelveen, The Netherlands
Tel: +31-20-758-6000
Web: www.meanwell.eu



Declaration of China RoHS Conformity

In order to reduce the impacts on the environment and take the more responsibility for protecting the earth, MEAN WELL is confirming and announcing the conformity to China RoHS, an Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products.

Environment Friendly Use Period Label

| | |
|---|---|
|  | <p>Observing SJT 11364-2014, Marking for the Restricted Use of Hazardous Substances in Electronic and Electrical Products</p> <p>Observing SJ/Z 11388-2009, General Guidelines of Environment-friendly Use Period of Electronic Information Products Appendix B, adopting table look-up to verify the Environment Friendly Use Period</p> |
|---|---|

Names and Contents of Hazardous Substances Lists

| Part Name | Hazardous Substances | | | | | |
|--|----------------------|-----------------|-----------------|---|--------------------------------------|---|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent chromium (Cr ⁶⁺) | Polybrominated biphenyls (PBB) | Polybrominated diphenyl ethers (PBDE) |
| PCB and its components | X | O | O | X | O | O |
| Metal structure parts | X | O | O | O | O | O |
| Plastic structure parts | O | O | O | O | O | O |
| Accessories | O | O | O | O | O | O |
| Cables | X | O | O | O | O | O |
| <p>O: The concentration of the hazardous substances within the homogeneous material of that product is less than the concentration limits set by GB/T 26572-2011.</p> <p>X: The concentration of the hazardous substances within the homogeneous material of that product is over the concentration limits set by GB/T 26572-2011; however, it follows the standard advised by 2011/65/EU.</p> | | | | | | |