

PRODUCT-DETAILS

2505 K-914

2505 K-914 Rocker Switch/push button Two-part rocker alpine white - Busch-balance SI



Informations générales

Extension du type de produit	2505 K-914
Code de produit	2CKA001731A3996
EAN	4011395224137
Description courte	2505 K-914 Rocker Switch/push button Two-part rocker alpine white - Busch-balance SI
Description longue	As a cover for flush-mounted control 2gang switch.

Installation

Instructions et manuels	No document needed
-------------------------	--------------------

Technique

Fiche produit, informations techniques	No document needed
Application	Switch/push button
Design Range	Busch-balance SI
Type de montage	Flush Mounted
Type of Fastening	Clamp
Finition de surface	Untreated Glossy
Matériau	Thermoplastic

Model Number	Two-part rocker
RAL Number	RAL 9010 - Blanc pur
Couleur	alpine white

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E1731
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	55 mm
Produit Hauteur Net	55 mm
Produit Longueur Net	20 mm
Poids net	20 g

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.294 kg
Code douanier	85389099
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA200000E1731
--------------------------------	-----------------

Classifications

ETIM 8	EC000011 - Control element/cover plate for domestic switching devices
ETIM 9	EC000011 - Control element/cover plate for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144002

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
2CKA001012A1150	2000/5 US-500 Flush Mounted Inserts Series switch	2000/5 US-500	1	piece
2CKA001012A2108	2000/5 US-507 Flush Mounted Inserts Series switch	2000/5 US-507	1	piece
2CKA001012A1135	2000/5 USGL Switch insert Series switch	2000/5 USGL	1	piece
2CKA001012A1606	2000/5 USR-503 Flush Mounted Inserts Series switch	2000/5 USR-503	1	piece
2CKA001011A0928	2000/6/6US-101-500 Flush Mounted Inserts Alternating-/alternating switch	2000/6/6US-101-500	1	piece

2CKA001012A2238	2400/5 USK-500 Flush Mounted Inserts Series switch	2400/5 USK-500	1	piece
2CKA001022A0663	2400/6/6US-101-500 Flush Mounted Inserts Alternating-/alternating switch	2400/6/6US-101-500	1	piece
2CKA001725A1531	2511-91-507 Cover Frame 1gang(s) entrée-grey - Basic55	2511-91-507	1	piece
2CKA001725A1484	2511-92-507 Cover Frame 1gang(s) white - Basic55	2511-92-507	1	piece
2CKA001725A1501	2511-93-507 Cover Frame 1gang(s) champagne - Basic55	2511-93-507	1	piece
2CKA001725A1479	2511-94-507 Cover Frame 1gang(s) alpine white - Basic55	2511-94-507	1	piece
2CKA001725A1506	2511-95-507 Cover Frame 1gang(s) château-black - Basic55	2511-95-507	1	piece
2CKA001725A1511	2511-96-507 Cover Frame 1gang(s) chalet-white - Basic55	2511-96-507	1	piece
2CKA001725A1516	2511-97-507 Cover Frame 1gang(s) foyer-red - Basic55	2511-97-507	1	piece
2CKA001725A1521	2511-98-507 Cover Frame 1gang(s) bistro-blue - Basic55	2511-98-507	1	piece
2CKA001725A1526	2511-99-507 Cover Frame 1gang(s) maison-beige - Basic55	2511-99-507	1	piece
2CKA001725A1532	2512-91-507 Cover Frame 2gang(s) entrée-grey - Basic55	2512-91-507	1	piece
2CKA001725A1485	2512-92-507 Cover Frame 2gang(s) white - Basic55	2512-92-507	1	piece
2CKA001725A1502	2512-93-507 Cover Frame 2gang(s) champagne - Basic55	2512-93-507	1	piece
2CKA001725A1480	2512-94-507 Cover Frame 2gang(s) alpine white - Basic55	2512-94-507	1	piece
2CKA001725A1507	2512-95-507 Cover Frame 2gang(s) château-black - Basic55	2512-95-507	1	piece
2CKA001725A1512	2512-96-507 Cover Frame 2gang(s) chalet-white - Basic55	2512-96-507	1	piece
2CKA001725A1517	2512-97-507 Cover Frame 2gang(s) foyer-red - Basic55	2512-97-507	1	piece
2CKA001725A1522	2512-98-507 Cover Frame 2gang(s) bistro-blue - Basic55	2512-98-507	1	piece
2CKA001725A1527	2512-99-507 Cover Frame 2gang(s) maison-beige - Basic55	2512-99-507	1	piece
2CKA001725A1533	2513-91-507 Cover Frame 3gang(s) entrée-grey - Basic55	2513-91-507	1	piece
2CKA001725A1486	2513-92-507 Cover Frame 3gang(s) white - Basic55	2513-92-507	1	piece
2CKA001725A1503	2513-93-507 Cover Frame 3gang(s) champagne - Basic55	2513-93-507	1	piece
2CKA001725A1481	2513-94-507 Cover Frame 3gang(s) alpine white - Basic55	2513-94-507	1	piece
2CKA001725A1508	2513-95-507 Cover Frame 3gang(s) château-black - Basic55	2513-95-507	1	piece
2CKA001725A1513	2513-96-507 Cover Frame 3gang(s) chalet-white - Basic55	2513-96-507	1	piece
2CKA001725A1518	2513-97-507 Cover Frame 3gang(s) foyer-red - Basic55	2513-97-507	1	piece
2CKA001725A1523	2513-98-507 Cover Frame 3gang(s) bistro-blue - Basic55	2513-98-507	1	piece
2CKA001725A1528	2513-99-507 Cover Frame 3gang(s) maison-beige - Basic55	2513-99-507	1	piece
2CKA001725A1534	2514-91-507 Cover Frame 4gang(s) entrée-grey - Basic55	2514-91-507	1	piece
2CKA001725A1487	2514-92-507 Cover Frame 4gang(s) white - Basic55	2514-92-507	1	piece

2CKA001725A1504	2514-93-507 Cover Frame 4gang(s) champagne - Basic55	2514-93-507	1	piece
2CKA001725A1482	2514-94-507 Cover Frame 4gang(s) alpine white - Basic55	2514-94-507	1	piece
2CKA001725A1509	2514-95-507 Cover Frame 4gang(s) château- black - Basic55	2514-95-507	1	piece
2CKA001725A1514	2514-96-507 Cover Frame 4gang(s) chalet- white - Basic55	2514-96-507	1	piece
2CKA001725A1519	2514-97-507 Cover Frame 4gang(s) foyer-red - Basic55	2514-97-507	1	piece
2CKA001725A1524	2514-98-507 Cover Frame 4gang(s) bistro-blue - Basic55	2514-98-507	1	piece
2CKA001725A1529	2514-99-507 Cover Frame 4gang(s) maison- beige - Basic55	2514-99-507	1	piece
2CKA001725A1535	2515-91-507 Cover Frame 5gang(s) entrée-grey - Basic55	2515-91-507	1	piece
2CKA001725A1488	2515-92-507 Cover Frame 5gang(s) white - Basic55	2515-92-507	1	piece
2CKA001725A1505	2515-93-507 Cover Frame 5gang(s) champagne - Basic55	2515-93-507	1	piece
2CKA001725A1483	2515-94-507 Cover Frame 5gang(s) alpine white - Basic55	2515-94-507	1	piece
2CKA001725A1510	2515-95-507 Cover Frame 5gang(s) château- black - Basic55	2515-95-507	1	piece
2CKA001725A1515	2515-96-507 Cover Frame 5gang(s) chalet- white - Basic55	2515-96-507	1	piece
2CKA001725A1520	2515-97-507 Cover Frame 5gang(s) foyer-red - Basic55	2515-97-507	1	piece
2CKA001725A1525	2515-98-507 Cover Frame 5gang(s) bistro-blue - Basic55	2515-98-507	1	piece
2CKA001725A1530	2515-99-507 Cover Frame 5gang(s) maison- beige - Basic55	2515-99-507	1	piece
2CKA001726A0222	2516-901-507 Decorative Styling Frame attica / pigeon blue - Basic55	2516-901-507	1	piece
2CKA001726A0223	2516-902-507 Decorative Styling Frame silver metallic - Basic55	2516-902-507	1	piece
2CKA001726A0224	2516-903-507 Decorative Styling Frame light green - Basic55	2516-903-507	1	piece
2CKA001726A0225	2516-904-507 Decorative Styling Frame orange - Basic55	2516-904-507	1	piece
2CKA001726A0226	2516-905-507 Decorative Styling Frame yellow - Basic55	2516-905-507	1	piece
2CKA001726A0227	2516-906-507 Decorative Styling Frame apricot - Basic55	2516-906-507	1	piece
2CKA001726A0228	2516-907-507 Decorative Styling Frame luminous - Basic55	2516-907-507	1	piece
2CKA001726A0220	2516-92-507 Decorative Styling Frame white - Basic55	2516-92-507	1	piece
2CKA001726A0230	2516-93-507 Decorative Styling Frame champagne - Basic55	2516-93-507	1	piece
2CKA001726A0218	2516-94-507 Decorative Styling Frame alpine white - Basic55	2516-94-507	1	piece
2CKA001726A0232	2516-95-507 Decorative Styling Frame château- black - Basic55	2516-95-507	1	piece
2CKA001726A0234	2516-96-507 Decorative Styling Frame chalet- white - Basic55	2516-96-507	1	piece
2CKA001740A0071	3050 Accessories 1 gang blue	3050	1	piece
2CKA001740A0082	3060 Concrete box 1 gang blue	3060	1	piece
2CKA002148A0120	2148 Extension of Claws	2148	1	piece
2CKA001740A0061	3048/10 Mounting box set 1 gang with Plastering moulding tool, positioning device, RFID-chip blue - Busch-axcent	3048/10	1	piece

2CKA001740A0072	3058/10 Mounting box set 1 gang blue - Busch-axcent	3058/10	1	piece
2CKA001740A0083	3068/10 Mounting box set blue - Busch-axcent	3068/10	1	piece
2CKA001784A0545	8350 Illumination set Switch/push button Orange Neon lamp 230 V	8350	1	piece
2CKA001784A0560	8352 Illumination set Switch/push button Orange Neon lamp 230 V	8352	1	piece
2CKA001784A0578	8353 Illumination set Switch/push button Orange Neon lamp 230 V	8353	1	piece
2CKA001784A0552	8360 Illumination set Orange Neon lamp 230 V red	8360	1	piece
2CKA001784A0586	8362 Illumination set Switch/push button Orange Neon lamp 230 V yellow	8362	1	piece
2CKA001784A0594	8363 Illumination set Switch/push button Orange Neon lamp 230 V white	8363	1	piece
2CKA001784A0024	8333-1 Illumination set Switch/push button White Incandescent lamp 3 ... 8 V - Busch-Duro 2000 SM	8333-1	1	piece
2CKA001784A0032	8337-1 Illumination set Switch/push button White Incandescent lamp 24 V	8337-1	1	piece
2CKA001784A0164	8344-1 Illumination set Switch/push button White Incandescent lamp 8 V	8344-1	1	piece
2CKA001784A0289	8345-1 Illumination set Switch/push button White Incandescent lamp 12 V	8345-1	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Cover Plates (partly incl. Insert) → Mechanical Controls

