

Midi free-standing Beacons / Permanent Light 826

Permanent Beacon RM 12-230VAC/DC BU



Part No.: 826.510.00

| MECHANICAL DATA | | |
|------------------------------|--------------------------------|--|
| Height | 200 mm | |
| Diameter | 98 mm | |
| Materials | PC PC/ABS | |
| Dome colour | Blue | |
| Housing colour | Black | |
| Protection category | IP65 | |
| Connection | Insulation-displacement contac | |
| cross-sectional area maximum | 1,50mm ² / 16AWG | |
| Cable entry | Through hole | |
| Cable entry maximum | d = 11 mm | |
| Type of fixing | Tube mounting | |
| Working temperature minimum | -20°C | |
| Working temperature maximum | +50°C | |
| Weight with packaging | 300 g | |
| Product weight | 231 g | |

| ELECTRICAL DATA | |
|------------------------|--------------------------|
| Operating voltage | 12-230V |
| Operating voltage type | AC/DC |
| Protection class | Protection class 2 |
| Pollution degree | 3 |
| Overvoltage category | II |
| Isolation voltage | Ui = 250V; Uimp = 2.500V |

| OPTICAL DATA | |
|----------------------|-----------------|
| Light colour | Blue |
| Service life optical | depends on bulb |

| APPROVAL DATA | |
|------------------------------|---------|
| Conforms with CE | Yes |
| Conforms with RoHS directive | Yes |
| WEEE | Yes |
| Conforms with ATEX-directive | No |
| Conforms with CCC | Yes |
| Conforms with UL | cULus |
| UL Type Rating | Type 12 |
| Conforms with FCC | No |
| Conforms with IC | No |


For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Midi free-standing Beacons / Permanent Light 826

Permanent Beacon RM 12-230VAC/DC BU

| EAC certificate available | Yes |
|-------------------------------|-----------------------|
| Conforms with UKCA (Importer) | Yes (WERMA (UK) Ltd.) |
| Conforms with AS-I | No |
| ICAO Certification | No |
| Conforms with DNV | No |
| Conforms with RoHS CN | No |
| Conforms with VdS | No |

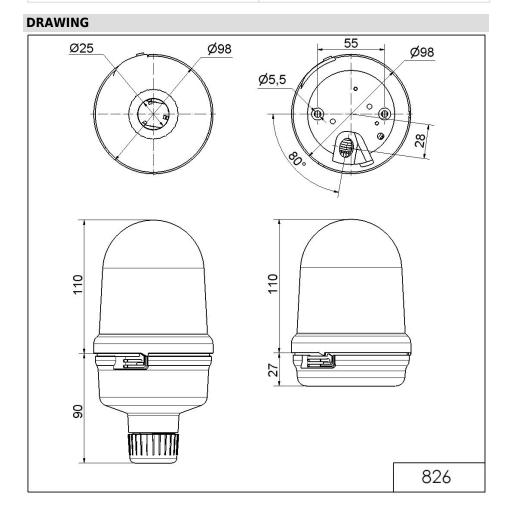

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.