



## CONTROL UNIT

### MCOX Control Unit

The MCOX control unit controls functions in the FX NET fire detection system. The MCOX communicates with the FX panel via the INFO serial communication line. The logical functions of the MCOX are configured with the MCO configuration tool. The MCOX unit can control addressable outputs as well as control panel outputs.

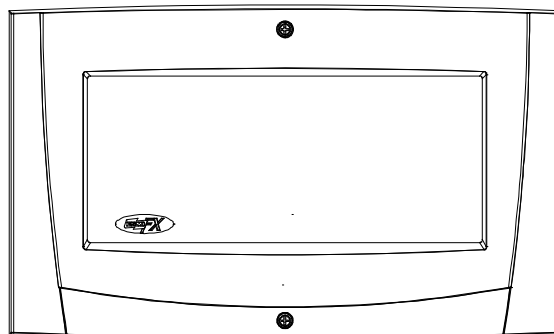

### Mechanical installation

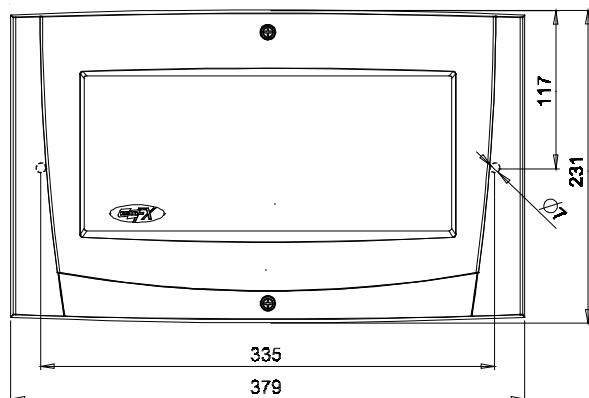

### Technical data


Dimensions (W x H x D)	379 x 231 x 54 mm
Weight	2,1 kg
Colour	Blue (NCS S 4020-R80B)
Operating Temperature	+5°C ... +40°C
Humidity	max. RH 95%
Operating Voltage	19 ...30 VDC
Standby current	50 mA
Serial communication ports	In: RS485 or RS232 Out: RS485
IP Rating	IP30

Pelco reserves the right to modifications.

### Product Codes

Product	Code	Description
MCOX	00703834	Panel version, wall mounting
MCOX-OB	00703835	PCB version, card slot mounting

**Electrical connections**

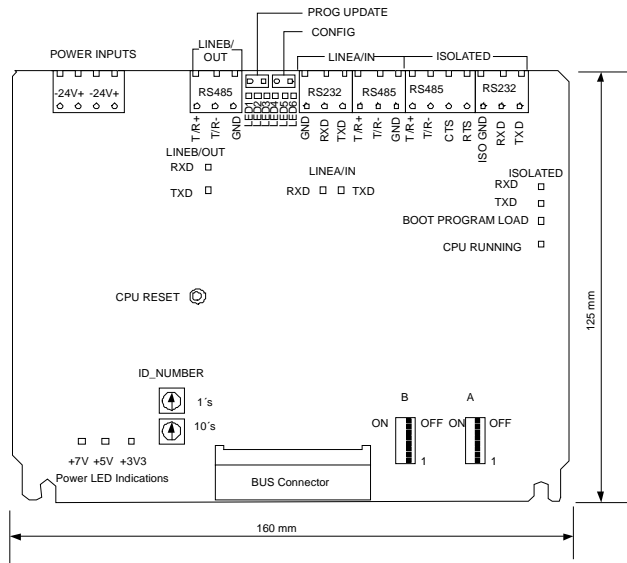

**“EXT” isolated port baud rate**

B4	B5	“EXT” port baud rate
OFF	OFF	1200
ON	OFF	2400
OFF	ON	4800
ON	ON	9600

**LED indications in normal use**

LED	Indicator	Meaning
LED 1	Continuous	Fault in configuration file
	Blinking (1s)	Configuration state
	Blinking quickly (100 ms)	Waiting for the acknowledge of the erasure of the configuration memory
LED 2	Continuous	MCOX logical error
	Blinking (1s)	MCO logic ok
	Blinking slowly (4s)	MCO installed but not configured
LED 3	Continuous	Power supply input 1 or 2 fault
	Blinking	NA
LED 4	Continuous	IN “A” line fault
	Blinking	IN “A” HW fault
LED 5	Continuous	OUT “B” line fault
	Blinking	OUT “B” HW fault
LED 6	Continuous	“EXT” isolated line fault
	Blinking	“EXT” isolated HW fault

**Settings and LED indications**

**A dip switch**

Switch	Position	Setting
A1	OFF	NA
	ON	NA
A2	OFF	NA
	ON	NA
A3	OFF	FX-panel connection
	ON	ESA/MESA panel connection (message set F or older)
A4	OFF	Not in use
	ON	
A5	OFF	Not in use
	ON	
A6	OFF	Not in use
	ON	
A7	OFF	Not in use
	ON	
A8	OFF	Normal state
	ON	Acknowledge to erase configuration memory

**Note!** In system fault all LED indications are continuous.

**LED indications in start up condition (10 seconds)**

LED	Indicator	Meaning
LED 1	Continuous	Display HW installed
	OFF	Display HW not installed
LED 2	Continuous	Isolated port installed
	OFF	Isolated port not installed
LED 3	Continuous	NA
	OFF	NA
LED 4	Continuous	NA
	OFF	NA
LED 5	Continuous	NA
	OFF	NA
LED 6	Continuous	MCO HW installed
	OFF	MCO HW not installed

**B dip switch**

Switch	Position	Setting
B1	OFF	“EXT” isolated line faults monitored
	ON	“EXT” isolated line faults not monitored
B2	OFF	“EXT” isolated line not in use
	ON	“EXT” isolated line in use
B3	OFF	OUT “B” port not in use
	ON	OUT “B” port in use
B4	OFF	“EXT” isolated port baud rate. See table below.
	ON	“EXT” isolated port baud rate. See table below.
B5	OFF	“EXT” isolated port baud rate. See table below.
	ON	“EXT” isolated port baud rate. See table below.
B6	OFF	IN “A” port baud rate 1200
	ON	IN “A” port baud rate 9600
B7	OFF	OUT “B” port baud rate 1200
	ON	OUT “B” port baud rate 9600
B8	OFF	To be “OFF”! Only for service purposes.
	ON	

**Jumpers for service purposes**

Jumper	ON	OFF
Prog update	Program update	Normal use
Config	Configuration state	Normal use

**Configuration**

The configuration is done with MCOX configuration tool via incoming RS232 serial port. During the configuration of the MCOX unit the communication line to the FX panel (RS485) must be disconnected. INFO protocol must be configured / enabled on the used port on fire panel (rs485 or rs232).

### Configuration memory erasure


The configuration memory can be erased back to the factory defaults by the following:

- disconnect power from the unit (power inputs PI1 and PI2)
- set "config" jumper ON
- turn panel ID number switches to E and F (E = 10's, F=1's)
- connect power back
- follow the LED number 1:
  - when the LED is blinking quickly turn dip switch A8 ON
  - LED1 OFF: erasure in progress
  - LED ON continuous: erasure is ready
- disconnect power, set ID switches back to "0" and remove the "config" jumper
- connect power back
- unit is starting without configuration data

### Software update

The unit is set to software update state by setting "prog update" jumper ON and restarting the panel (by pressing the CPU reset button). The software update is done with PC loader software via incoming RS232 serial port. During the software update of the MCOX unit communication line to the FX panel (RS485) must be disconnected.

### System principle

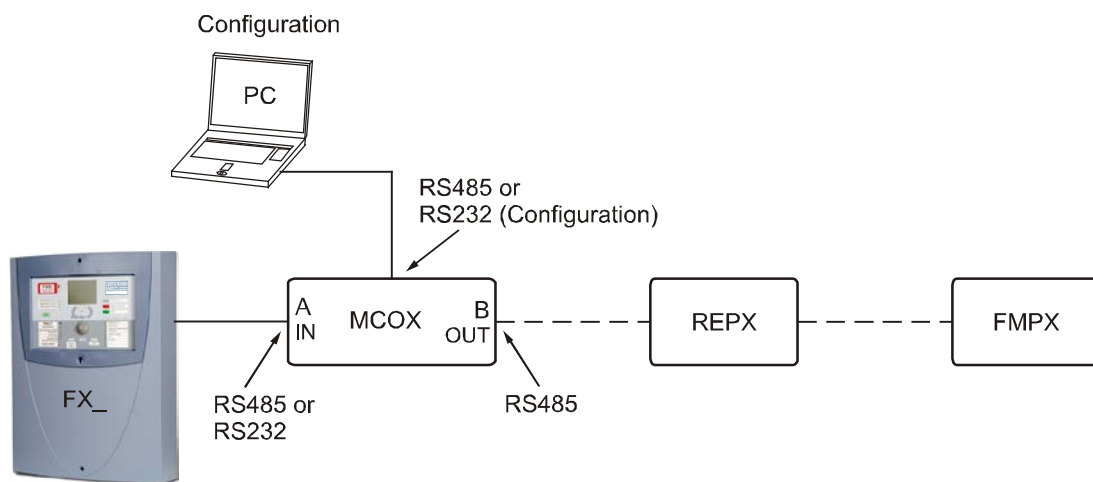

**Note!** Only one MCOX unit can be connected to the FX NET fire detection system.

The maximum number of MCOX, MCOX-OB, FMPX, DAPX, REPX, REPX-OB, ZLPX, ZLPX-IC units connected to one FX\_ panel is 16.

The RS232 setting is used for the configuration and software update.

The RS232 and RS485 on IN port may not be connected at the same time.

The INFO-line in the MCOX (MCOX-OB) unit must be disconnected during the MCOX (MCOX-OB) configuration.

**Note!** The maximum RS485 cable length between 2 devices is 1000 m.

The maximum RS232 cable length is 10 m.